

OPERATING INSTRUCTIONS

STAGEKET | Electric chain hoists



MADE IN GERMANY

Please do not use the electric chain hoist before all operators have carefully read and understood this manual and signed the form on the rear cover.

LIFTKET Hoffmann GmbH

Dresdener Straße 66-68
04808 Wurzen / Germany



+49-3425-89 24-0



+49-3425-89 24-99



sales@liftket.de



www.liftket.de

Ho 03/2020 englisch
Original operating instructions

Contents

1	Safety instructions.....	5
1.1	Regulations	5
1.2	Advice for the use of electric chain hoists	6
1.2.1	Design according to DGUV V54 (BGV D8)	6
1.2.2	Additional requirements when designed according to DGUV V17 (BGV C1)	7
1.3	Prohibitions of use.....	7
1.4	Directions for use	7
1.5	Visible damages	8
1.6	Special features of electric chain hoists according to DGUV V17 (BGV C1)	8
1.6.1	Prohibitions of use.....	8
1.6.2	Moving of loads	8
1.6.3	Persons underneath suspended loads	8
1.6.4	Types of loads.....	8
1.6.5	Attaching lights or other equipment to the electric chain hoists	8
1.7	Spare parts.....	9
2	Technical overview.....	9
2.1	Assembly options	9
2.2	Mounting positions	10
2.3	Explanation of type designation.....	10
2.4	Sectional view	11
2.5	Load chain configuration	12
3	Assembly.....	12
3.1	Mechanical assembly	12
3.1.1	Hook tackle.....	12
3.1.2	Hook block.....	13
3.1.3	Stationary electric chain hoist.....	14
3.1.3.1	Hoist suspension with suspension eye	14
3.1.3.2	Hoist suspension with single hole suspension eye	15
3.1.3.3	Hoist suspension with hook suspension.....	16
3.1.4	Gear ventilation	17
3.1.5	Chain box	17
3.1.5.1	Mounting of fixing plates.....	17
3.1.5.2	Attaching the chain box	18
3.1.5.3	Chain box in inverted use	18
3.1.6	Assembling the load chain in single fall version	19
3.1.7	Assembling the load chain in double fall version	20
3.1.8	Replacing the load chain, the chain guide and the hold down.....	21
3.1.9	Lift limiter.....	21
3.2	Electric connections	21
3.2.1	Mains power	21
3.2.2	Operating voltages	23
3.2.3	Direct control	23
3.2.4	Low voltage control	23
3.2.5	Electrical limit switches for lift limiting.....	24
3.3	Configuration of electric chain hoists according to DGUV V17 (BGV C1)	24
3.4	Limit switches in upright use.....	25
3.5	Limit switches in inverted use.....	25
3.6	Operation and emergency limit switches	25
3.6.1	Gear limit switches	25
3.6.2	External emergency limit switches	26
3.7	Incremental encoder.....	27
3.8	Mechanical underload protection.....	28
3.9	Electronic overload and underload protection	29
3.10	Control pendant.....	30
4	Electric chain hoist with trolley.....	31
4.1	Types of trolleys	31
4.2	Permissible curve radius	31
4.3	Horizontal movement of electric chain hoists	32
4.4	Attachment of lightning devices to electric chain hoists.....	32
4.5	Mechanical assembly	32
4.5.1	Assembly position of the trolley on the electric chain hoist.....	32
4.5.2	Assembly of the trolley with two connecting bolts.....	33
4.5.3	Assembly of the trolley with one connecting bolt.....	33

4.6	Electric trolleys with counterweight	33
4.7	Electric connection of electric trolleys	34
5	Initial operation	34
5.1	Initial operation according to DGUV V54 (BGV D8)	34
5.2	Initial operation according to DGUV V17 (BGV C1)	34
6	Tests	34
6.1	Test when used according to DGUV V54 (BGV D8) §23 - Winches, lifting and pulling equipment	35
6.2	Test when used according to DGUV V52 (BGV D6) §25 - Cranes	35
6.3	Regular tests	35
6.4	Additional tests according to DGUV V17 (BGV C1) and IGWV SQP2	35
7	Maintenance	36
7.1	Maintenance and checks	36
7.2	Single brake	37
7.2.1	Description of the single brake	37
7.2.2	Replacement of the brake	37
7.3	Double brake SK03../...	38
7.3.1	Construction of the double brake SK03../...	38
7.3.2	Replacement of the brake SK03../...	38
7.4	Double brake SK 07../... and SK10../...	39
7.4.1	Construction of the double brake SK 07../... and SK10../...	39
7.4.2	Replacement of the brake SK 07../... and SK10../...	39
7.5	Electric control of the brake	40
7.6	Troubleshooting on the brake	40
7.7	Functional check of the brake	41
7.8	Safety sliding clutch	42
7.8.1	Construction of safety sliding clutch	42
7.8.2	Adjustment of friction torque at the safety sliding clutch	43
7.8.3	Checking the release limit of the sliding clutch during regular inspections	43
7.9	Assembly and disassembly of the brake-clutch assembly group	44
7.10	Load chain	44
7.10.1	Lubrication of the load chain before initial operation and during operation	44
7.10.2	Testing of wear and replacement of the load chain	45
7.11	Measuring wear and replacing load hook	45
7.12	Maintenance work on the trolleys	45
8	Duty rate of an electric chain hoist	46
8.1	Short time duty	46
8.2	Intermittent duty	47
8.3	Example	47
9	Duty rate of the electric trolleys	47
10	Strainer clamp for the control cable	48
11	Lubricants / Auxiliary materials	48
11.1	Gear	48
11.2	Chain	49
11.3	Hook block and hook tackle	50
11.4	Trolley	50
12	Measures to be taken at the end of the S.W.P.	50
13	Example of Declaration of Conformity	51
14	Example of Declaration of Incorporation	52

1 Safety instructions

1.1 Regulations

The following regulations and all recommendations of this manual serve as basis for assembly, installation, certification and maintenance of electric chain hoists, within Germany and within the area of the European community. For countries other than mentioned, local legislation and directives may apply in addition to the regulations as stated in this manual (German/European). Please pay particular attention to the rules for the prevention of accidents and the statutory regulations.

European Regulations	
2006/42/EC	EC-Machine directive
2014/30/EG	EC-Directive relating to electromagnetic compatibility
2014/35/EG	EC-electrical equipment designed for use within certain voltage limits

BGV accident prevention regulations	
DGUV Vorschrift 3 (BGV A1)	Principles of prevention
DGUV Vorschrift 3 (BGV A3)	Electrical facilities and equipment
DGUV Vorschrift 52 (BGV D6)	Accident prevention regulation for use in crane systems
DGUV Vorschrift 54 (BGV D8)	Accident prevention regulation for electric winches, lifting and pulling equipment
DGUV Regel 100-500 (BGR 500)	Hoisting accessories
DGUV Grundsatz 309-001 (BGG 905)	Principles for crane inspections

Harmonized regulations	
DIN EN ISO 12100:2010	Safety of machinery; Basic terminology, methodology
DIN EN 14492-2:2006+A1:2009	Cranes - Power driven winches and hoists
DIN EN 818-7:2002+A1:2008	Short link chain for lifting purposes; Fine tolerance hoist chain, Grade T
DIN EN ISO 13849-1:2008	Safety of machinery - Safety-related parts of control systems; General principles for design
DIN EN 60034-1:2010	Rotating electrical machines; Rating and performance
DIN EN 60034-5:2001+A1:2007	Rotating electrical machines; Degrees of protection provided by the integral design of rotating electrical machines
DIN EN 60204-1:2006	Electrical equipment of machines, General requirements
DIN EN 60204-32:2008	Electrical equipment of machines; Requirements for hoisting machines
DIN EN 60529:1991+A1:2000	Degrees of protection provided by enclosures (IP-Code)
DIN EN 60947-1:2007+A1:2011	Low-voltage switchgear and control gear
DIN EN 61000-6-2:2005	Electromagnetic compatibility, Immunity for industrial environments
DIN EN 61000-6-3:2007+A1:2011	Electromagnetic compatibility, Emission standard for residential, commercial and light-industrial environments
DIN EN 61000-6-4:2007+A1:2011	Electromagnetic compatibility, Emission standard for industrial environments
DIN EN 82079-1:2013	Preparation of instructions for use - Structuring, content and presentation

Regulations and technical specifications	
FEM 9.511:1986	Rules for the design of series lifting equipment; Classification of mechanisms
FEM 9.683:1995	Series lifting equipment; Selection of hoisting and travelling motors
FEM 9.751:1998	Series lifting equipment; Power driven series hoist mechanisms; Safety
FEM 9.755:1993	Serial hoist units; Measures for achieving safe working periods

The producers guarantee depends on consideration of these regulations and of operating instructions.

Other national regulations are valid for countries outside of the European community.

1.2 Advice for the use of electric chain hoists

1.2.1 Design according to DGUV V54 (BGV D8)

Electric chain hoists are designed to lift and to lower loads vertically and to travel horizontally with those lifted loads (with trolleys).

Any other use is not considered to be proper. Manufacturer does not take responsibility for any improper use and the risk is on the operator's responsibility.

The use of the electric chain hoist in an aggressive environment is not allowed without permission of the manufacturer.

To this effect, it may be necessary to make certain components from different materials.

The electric chain hoist can only be operated by personnel, who have complete knowledge of this manual, and have unhindered access to it. Do not operate the electric chain hoist until all operators have thorough knowledge of this manual and acknowledge that by signing the allocated field on the rear cover of this brochure.

If properly used, the modern design of the electric chain hoists guarantees safety and economic operation.

The safety friction clutch is located outside of the load path, which enables stopping the load without putting strain on the clutch. The force of the brake acts via a form-locked join on the gear and therefore it will be directly transmitted on the load.

Before first use make sure, that all electrical wires are connected in accordance with the instructions, that all wires are without damages and that the whole equipment could be switched off by a main switch. It is the responsibility of the operator to make sure that all suspension points of the hoist are designed to safely withstand the dynamic forces caused by the lifting equipment.

The chain hoist can only be used when it is suspended according to specification and the outgoing chain can leave the hoist safely, by its own weight, in the relevant direction.

Therefore the container for the dead end of the chain outside the hoist must be big enough to allow the chain to come out.

If not, the chain can be trapped inside the hoist and can break the casing of the hoist.

Maintenance work on electric chain hoists has to be carried out by trained and authorised people only. The main switch has to be switched off and the working area is to be secured beforehand.



Authorised people have to have a theoretical training as well as experience in the field of winches, lifting and pulling equipment or cranes. They have to possess an excellent knowledge of the relevant work safety regulations, directives, and general accepted rules of lifting techniques, which enables them to decide whether the lifting equipment is in a safe working condition or not.

Any maintenance work and inspections are to be entered into the crane inspection book (e.g. brake or clutch adjustments).

This manual will tell you how to operate the hoist and how to handle its suspension or its loads safely. The following safety advices have to be observed. The safety instructions may not be complete for each mode of use. If there are any questions or problems contact the manufacturer or our local representative.

This Operating Instructions should always be in a complete and fully readable condition.

No responsibility is taken for damages and operating troubles due to the following reasons:

- improper use
- unauthorised modification of the drive system
- unworkmanlike work done on the system and with the system
- operating errors
- Failure to use the product as instructed in the manual



1.2.2 Additional requirements when designed according to DGUV V17 (BGV C1)

The electric chain hoists in the design 'SB' (with 2 brakes and half load capacity) are subject to requirements of DGUV V17 (BGV C1).

The operators have to be well trained in order to make them aware about the special requirements, resulting from stage and studio use of chain hoists according to DGUV V17 (BGV C1). The operation instructions have to be read carefully by the operators, and they shall sign a form stating that they have got the information.



1.3 Prohibitions of use

- Do not use the chain hoist to carry people. It is strictly prohibited.
- Do not use the chain hoist in inching mode (fast switching on / off of functions).
- Do not permanent run against the rubber buffers of the lowest and highest hook position (ultimate safety limit for emergency only).
- Do not use the chain hoist with people being underneath the load.
This does not apply to electric chain hoists in accordance with DGUV V17 (BGV C1).



- Do not move loads heavier than the nominal load.
 - Do not pull loads diagonally or drag loads.
 - Do not tear off loads.
 - Do not remove the cover of vessels, which are under vacuum.
 - Do not move a trolley by pulling the control pendant or the control cable, even if these are relieved of strain.
 - Do not use the lifting chain to sling the loads.
 - Do not use the chain hoist with a lifting chain, which is longer than stated on the chain box.
-
- Do not start the initial operation before an expert or a trained specialist has inspected the equipment.
 - Do not carry out repairs without special knowledge.
 - Do not use the chain hoist with higher duty rate as marked on the specification plate.
 - Do not use the chain hoist without having done the regular inspection.



1.4 Directions for use

- The load may only be moved if it is slung securely and no person is standing under the load or near enough to be at risk DGUV V54 (BGV D8).
 - The load must be placed vertically under the electric hoist before lifting.
 - The motion directions are indicated with symbols on the control buttons.
 - Do not turn the chain over edges.
 - Do not lower the double fall hook until the chain gets slack.
 - The chain leaving and entering the hoist in inverted use must be kept tight at all times.
 - Consult the manufacturer, if the hoist is to be used in an aggressive environment
 - Consult the manufacturer, when transporting red-hot melts or similar dangerous materials.
 - Repair work can be done by specialists only if mains supply is switched off and secured and no load is suspended on the hook.
 - After an emergency stop button actuation, the cause of actuation has to be found and all possible failures removed by expert personnel. Reset emergency pushbutton only after this procedure.
 - Lifting the load from the ground has to be done with the lowest possible speed. Before doing this slack sling chains or ropes have to be tightened carefully.
 - When operating a chain hoist at a height that is reachable by hand, do not touch the hoist at the chain entry. Proper safety measures have to be established to avoid the risk of squeeze.
-
- All electric chain hoists are suitable for an environment temperature of -20°C to $+40^{\circ}\text{C}$ as standard.
For use at higher environmental temperatures the duty rate must be reduced correspondingly.
 - The standard protection class is IP 55.
 - The motors are manufactured according to the requirement of Insulation Class F.
 - Installation altitude $\leq 1000\text{m}$ above sea level.



1.5 Visible damages

If damage is detected during operation or inspection of the electric chain hoist, these electric chain hoists must be taken out of service immediately.

Recommissioning is only permitted after proper repair, inspection and release by a competent person.

In case of broken load chain, the owner/operator shall not put the chain hoist into operation until the hoist has been checked, repaired and approved by an authorized specialist.



1.6 Special features of electric chain hoists according to DGUV V17 (BGV C1)

1.6.1 Prohibitions of use

- Do not stay underneath the load if this is not necessary (§19, DGUV V17 (BGV C1)).
- Do not endanger persons (§§19, 26, DGUV V17 (BGV C1)).
- Do not start initial operation before an authorized expert or a trained specialist has inspected and approved the equipment (§§33, 34, DGUV V17 (BGV C1)).
- Do not use the ultimate limit switch as an operation limit switch (§26 (6), DGUV V17 (BGV C1)).



1.6.2 Moving of loads

Attention should be paid to the following:

- The load has to be moved only if it is safely attached to the load hook.
- Moving loads must not endanger persons.
- There has to be a sufficient distance between moving and static parts.
- There has to be a visibility of the load by the operator at any time or any movement has to be done with a second person who has visibility of the load and the operator.
- Device to prevent an unauthorised operation of the hoist has to be provided by the owner / operator.



1.6.3 Persons underneath suspended loads

There must not be any persons underneath a suspended load if it or parts of it could be lowered to less than 2000 mm above the floor where these persons are staying except this is required by the scenery of an event.



1.6.4 Types of loads

It is permitted to attach one lighting device only to an electric chain hoist by a telescope hoist or pantographs. The safe working load (SWL) of the electric chain hoist should be adhered to. Several lighting devices are count as one device, if attached on the electric chain hoist at their centre of gravity. It is most important, that the same safety as for a single device should be reached.



It is permitted to suspend more than one lighting device to a batten hoist. The safe working load (SWL) of the type plate of the electric chain hoist and the maximum single load on the batten hoist should not be exceeded.



Follow the above advice also if other items are attached to the load hook in special cases.

1.6.5 Attaching lights or other equipment to the electric chain hoists

Loads have to be attached from special scaffolds, approved working platforms or similar safe positions only.



1.7 Spare parts

Only original fixing components, spare parts and accessories, listed in manufacturer's spare parts catalogue are acceptable for use. The producer's guarantee is given for those spare parts only. The producer cannot be held responsible for any damages due to the use of non-original parts and accessories.

2 Technical overview

2.1 Assembly options

The simple building block system makes it easy to convert an electric chain hoists to different versions. This allows the choice of single or double fall versions, stationary or mobile with push or electric trolleys, and the installation of greater hoisting and operating heights.



Figure 1: Assembly options

In case of outdoor use protect the chain hoist from rainwater.
Check drain hole before outdoor use.



2.2 Mounting positions

Electric chain hoists can be applied in normal and inverted use.

The subsequent reconfiguration is possible. Required parts for reconfiguration order from manufacturer.



Figure 2: Electric chain hoist in normal and inverted use

Caution! If the electric chain hoist is used in inverted use the chain leaving and entering the hoist must be kept tight at all times.


Non-compliance may result in chain jam in the chain guide and damage of the chain hoist and the chain itself.



2.3 Explanation of type designation

Version STAGEKET SK030/22

Type 500 / 1 – 8

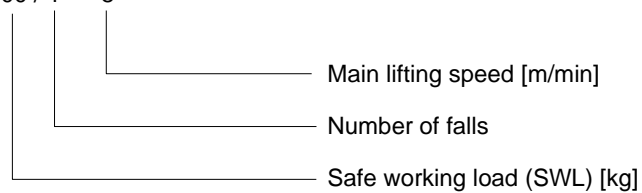

According to the Machine directive 2006/42/EC you will find all technical data in the technical documentation attached to each hoist.

2.4 Sectional view

No.	Description
1	Hoist body
2	Gear cover
3	Cap for brake
4	Cap for gear cover
5	Brake
6	Clutch unit
7	Motor pinion shaft
8	Rotor
9	Stator
10	Sprocket wheel

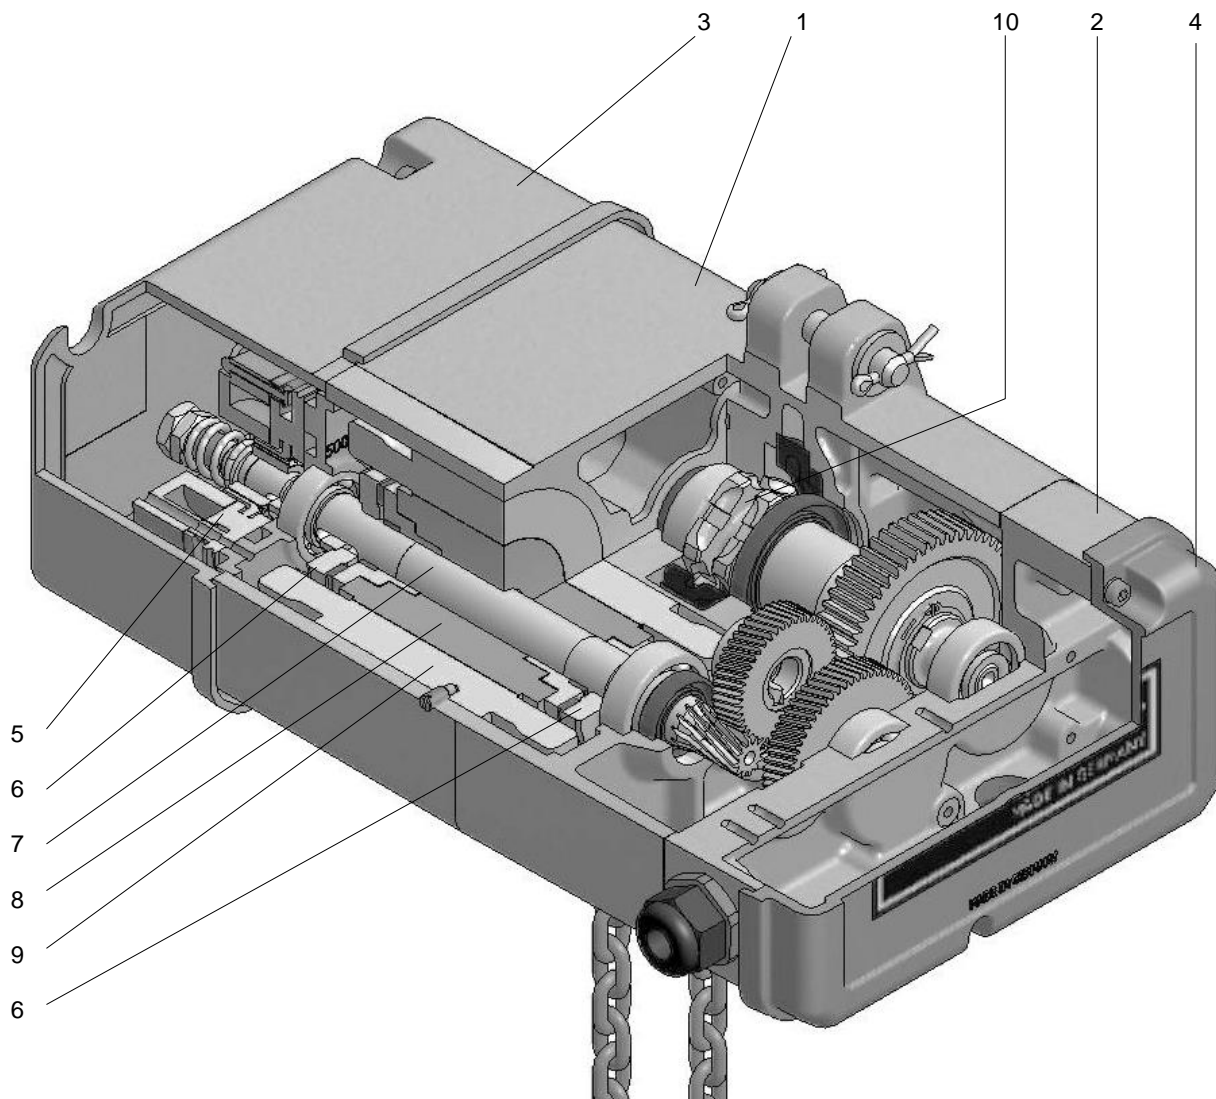


Figure 3: Sectional view

2.5 Load chain configuration

Attention! Use original chain of the manufacturer only! These original chains meet the high stress and service life standards required.



Single fall version

Double fall version

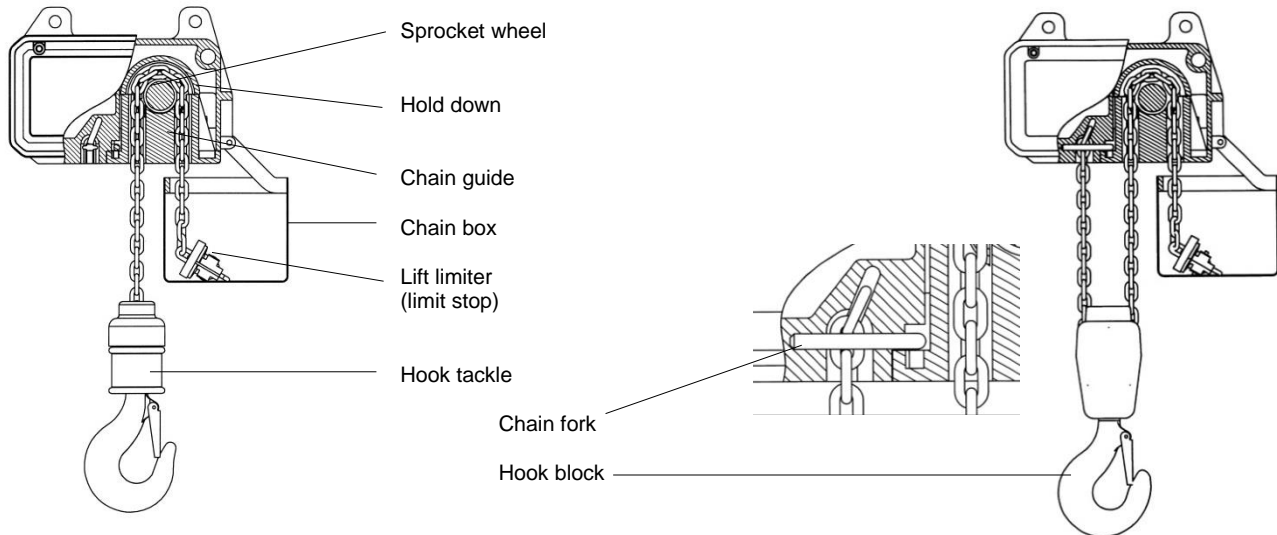


Figure 4: Configuration of load chain


3 Assembly

Assembly work should only be carried out by trained specialist in accordance with DGUV V54 (BGV D8) § 24.


3.1 Mechanical assembly

3.1.1 Hook tackle

The hook tackle is used to attach loads for hoists in single fall version.

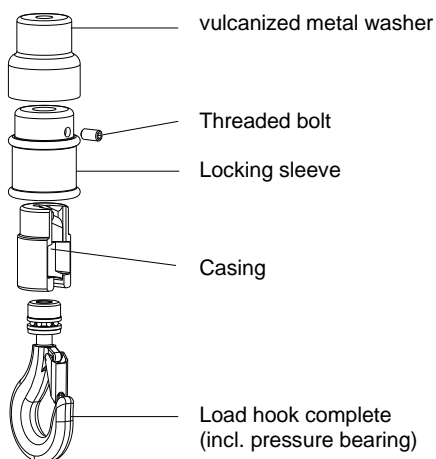

Hook tackle for chains
5x15, 5,2x15 and P 5,4x15

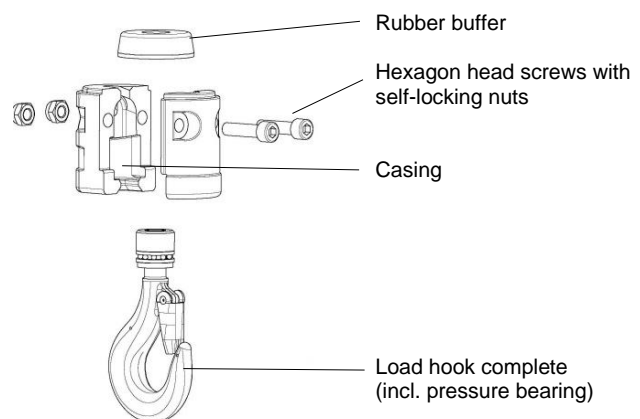

Hook tackle for chains
7x22, 7,2x21, P 7,4x21,1, 10x28 and 10,5x28,2

Figure 5: Structure of the hook tackle

During maintenance work the condition of the load hook (wear and centre punch spacing), the rubber buffer, the pressure bearing, the safety latch and the pin, which secures the hook nut, have to be checked. If required, the axial bearing has to be cleaned and greased. The locking sleeve of the hook tackles of chains 5x15 mm, 5.2x15 mm and P 5.4x15 has to be checked additionally and changed if worn.

For the assembly of the hook tackle the following tightening torques of the screw connections must be observed:

	Max. load capacity [kg]	Dimension of screws	Quantity	Tightening torque [Nm]
hook tackle for chain 5x15 mm	500	-	-	-
hook tackle for chain 5.2x15 mm	500	-	-	-
hook tackle for chain P 5.4x15 mm	500	-	-	-
hook tackle for chain 7x22 mm	1000	M10x40 DIN 912	2	35
hook tackle for chain 7.2x21 mm	1250	M10x40 DIN 912	2	35
hook tackle for chain P 7.4x21.1 mm	1250	M10x40 DIN 912	2	35
hook tackle for chain 10x28 mm	2500	M12x60 DIN 912	2	50
hook tackle for chain 10.5x28.2 mm	2500	M12x60 DIN 912	2	50

Table 1: Tightening torques of screw connections

3.1.2 Hook block

The hook block is used to attach the load in double fall version.

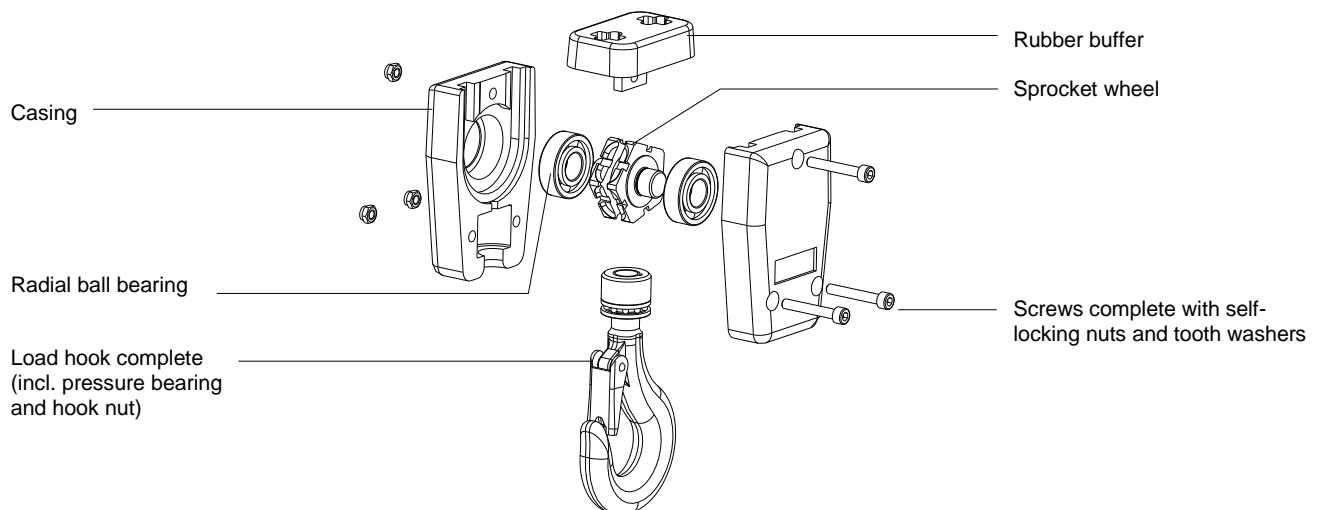


Figure 6: Structure of the hook block

During maintenance work the condition of the load hook (wear and centre punch spacing), the rubber buffer, the pressure bearing, the safety latch and the pin, which secures the hook nut, have to be checked.

During assembly of the hook blocks the connection screws should be tightened with the following torque:

	Max. load capacity [kg]	Dimension of screws	Quantity bottom/top	Tightening torque [Nm] bottom/top
Hook block of chain 5x15 mm	1000	M6x40 DIN 912	2/1	10/6
Hook block of chain 5.2x15 mm	1000	M6x40 DIN 912	2/1	10/6
Hook block of chain 7x22 mm	2000	M8x50 DIN 912	2/1	20/10
Hook block of chain 7.2x21 mm	2500	M8x50 DIN 912	2/1	20/10
Hook block of chain 10x28 mm	5000	M10x70 DIN 912	2/1	35/20
Hook block of chain 10,5x28.2 mm	5000	M10x70 DIN 912	2/1	35/20

Table 2: Tightening torques of screw connections

3.1.3 Stationary electric chain hoist

3.1.3.1 Hoist suspension with suspension eye

Caution! It is not allowed to use any other non-original parts, fixing bolts or screws to connect the electric chain hoist to the suspension.

The hole for the tandem trolley on the suspension eye must be on the chain box side.

Assembly: The suspension eye section must be inserted into the specially provided suspension holes on the electric chain hoist and pinned into place with the two bolts. Use washers with the lock bolts and secure position with split pins.

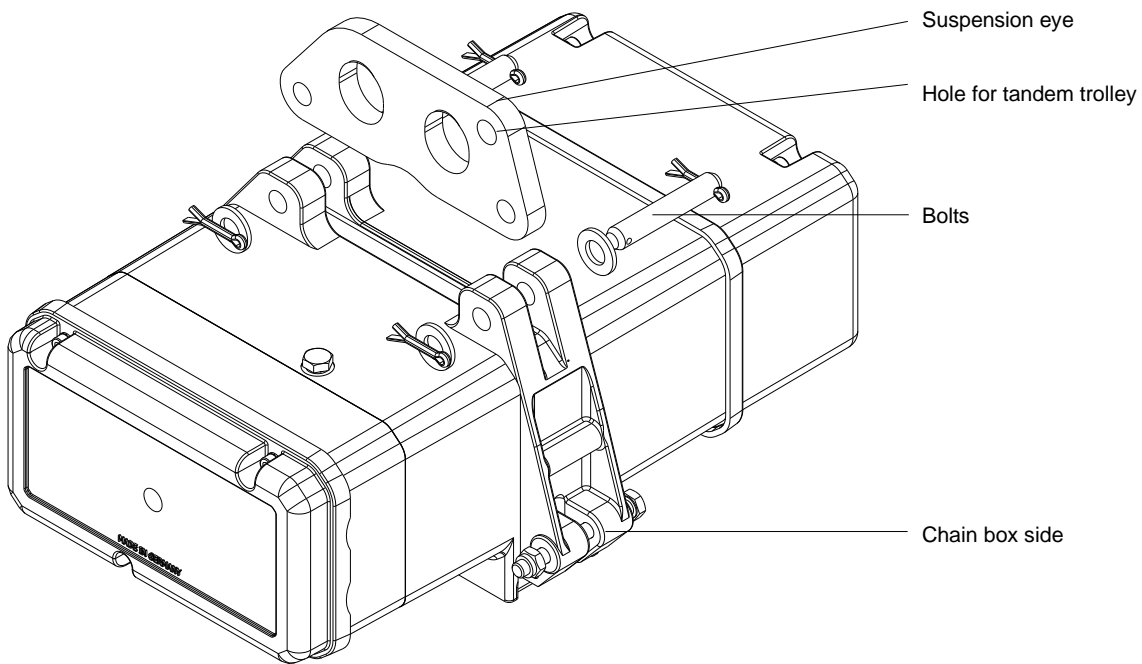


Figure 7: Suspension with suspension eye

3.1.3.2 Hoist suspension with single hole suspension eye

Caution! It is not allowed to use any other non-original parts, fixing bolts or screws to connect the electric chain hoist to the suspension.



The label of hook tackle used for the single fall version and the label of hook block used for the double fall version should be in the respective version on chain box side.


Assembly: Fix the provided single hole suspension eye to the special suspension holes of the electric chain hoist with suspension bolts. Use washers and secure with split pins.



By rotating the suspension eye by 180° the single fall version or double fall version will be realized.

This applies to the single hole suspension in standard version as well as in MB-version.

Single fall version

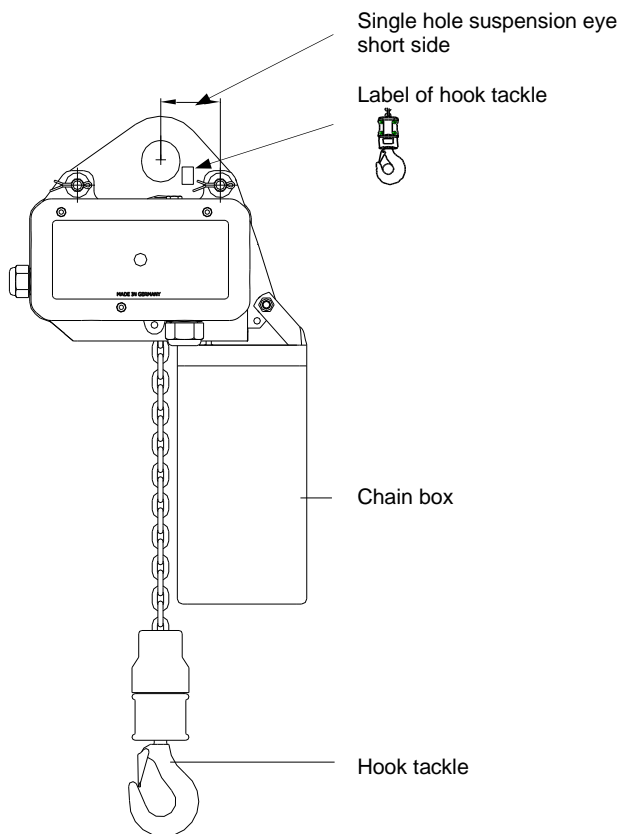

Double fall version

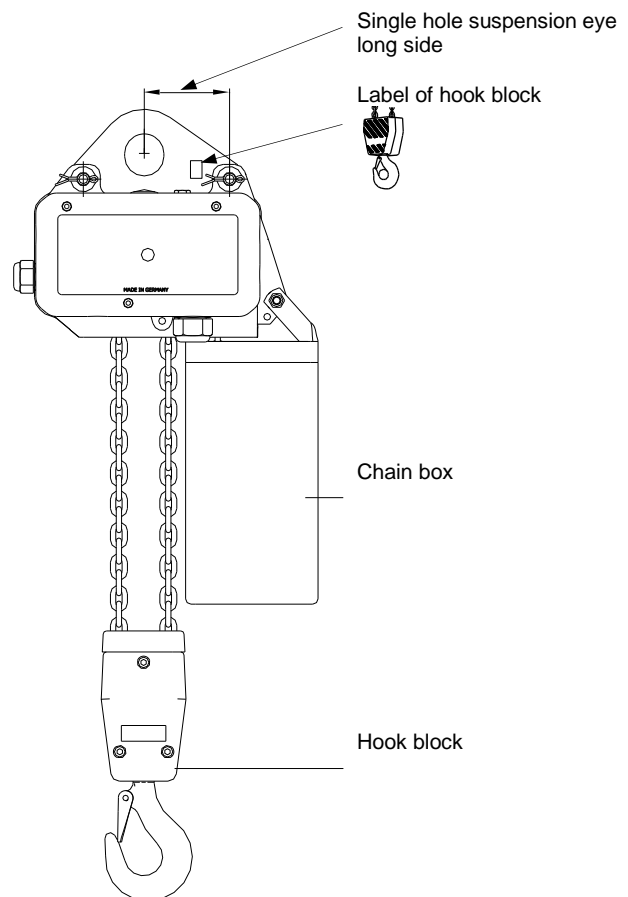


Figure 8: Suspension with single hole suspension eye

3.1.3.3 Hoist suspension with hook suspension

Caution! It is not allowed to use any other non-original parts, fixing bolts or screws to connect the electric chain hoist to the suspension.




The label of hook tackle used for the single fall version and the label of hook block used for the double fall version should be in the respective version on chain box side.

Assembly: Fix the provided hook suspension eye to the special suspension holes of the electric chain hoist with suspension bolts. Use washers and secure with split pins.



By rotating the hook suspension by 180° the single fall version or double fall version will be realized.

Single fall version

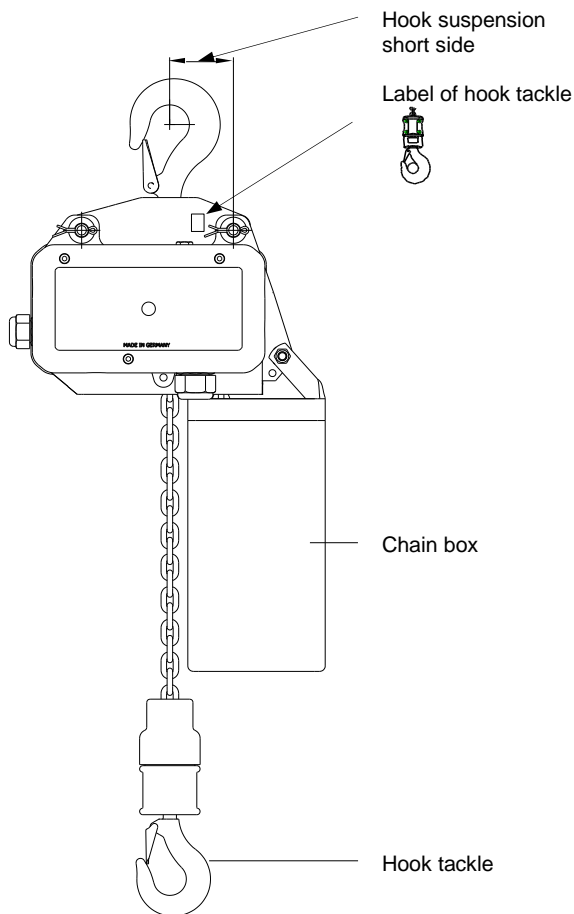

Double fall version

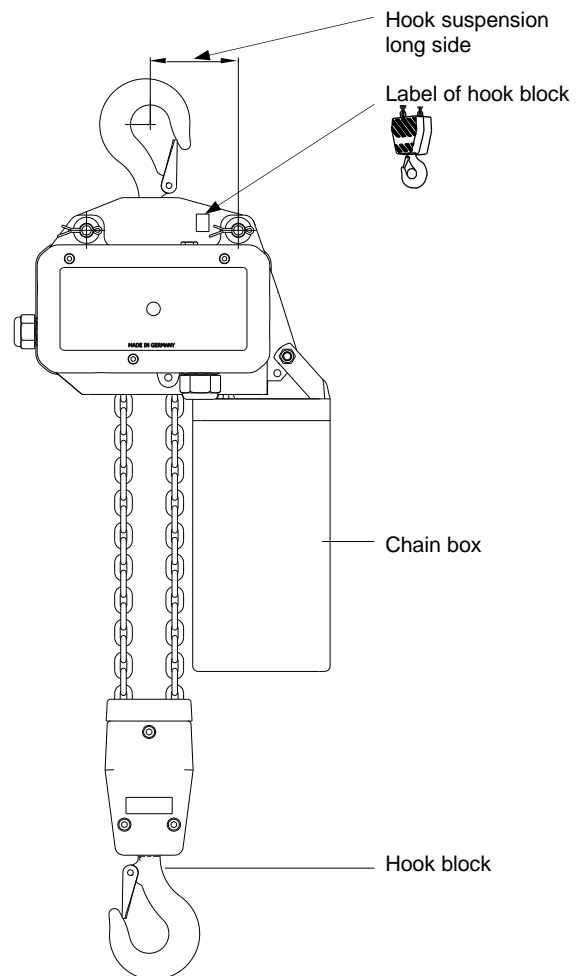


Figure 9: Suspension with hook suspension

3.1.4 Gear ventilation

Having completed the assembly, the split washer must be placed under the oil filler plug (top side of casing) to avoid oil leakage due to high pressure inside the gearbox.

Attention! For outdoor use, for use as mobile hoist (MB) and for inverted use, high air humidity and big differences in temperatures the use of the serrated washer is **not recommended**. The gear box is than sealed by plain washers on top and bottom oil filling screws.

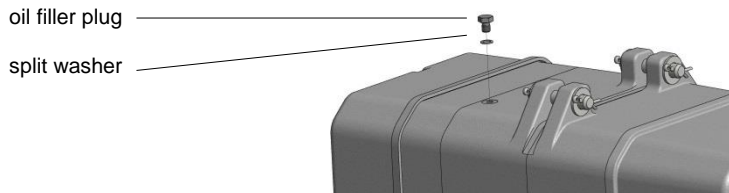


Figure 10: Oil filler plug

3.1.5 Chain box

Caution! Before assembly, check whether the chain box suitable for the chain length of the chain hoist is available. The chain dimension and filling capacity are indicated on the chain box.



After mounting the chain box, loosely insert the chain end with lift limiter and rubber buffer into the chain box.

Press the 'UP' button and let the chain run into the chain box by motor.
Check fill level of the chain box.

It is not permitted to exceed the maximum filling quantity!

3.1.5.1 Mounting of fixing plates

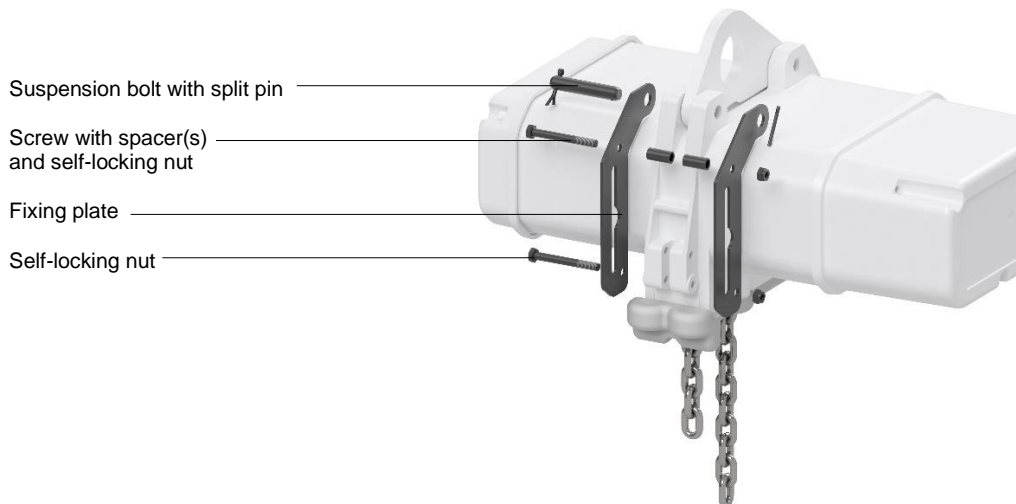


Figure 11: Mounting of fixing plates

1. Mount the fixing plates with the suspension bolt of the electric chain hoist, screws and spacer(s) as shown in the picture:
Caution: The fixing plates replace the washers on the suspension bolt of the electric chain hoist.
2. Fix the suspension bolts with split pins.
3. Fasten the fixing plates with screws and self-locking nuts.
4. Tighten the nuts until the screws are tight. There must be no visible play between housing and fixing plate.
Attention: Replace self-locking nuts if the screws are not firmly seated when the fixing plates are reassembled.

3.1.5.2 Attaching the chain box

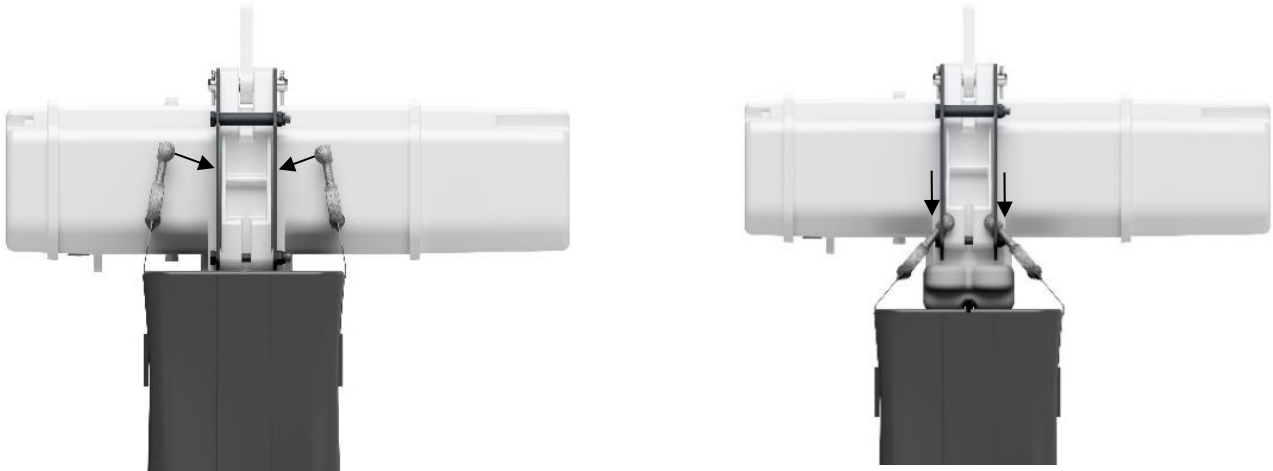


Figure 12: Attaching the chain box

1. Insert the brackets of the chain box into the openings of the fixing plates. Turn the eyelets 90° and turn them back again after inserting them into the opening of the fixing plate.
2. Push the brackets of the chain box up to the end of the retaining plates.

3.1.5.3 Chain box in inverted use

1. When using the electric chain hoist in the inverted use, the fixing plates are fitted as described in Section 3.1.5.1.
2. Attach the chain box as described in section 3.1.5.2.
3. Mount the lift limiter approx. 50 cm before the end of the chain and insert it into the chain box.
Attention: Chain must be centered in the chain guide plate.

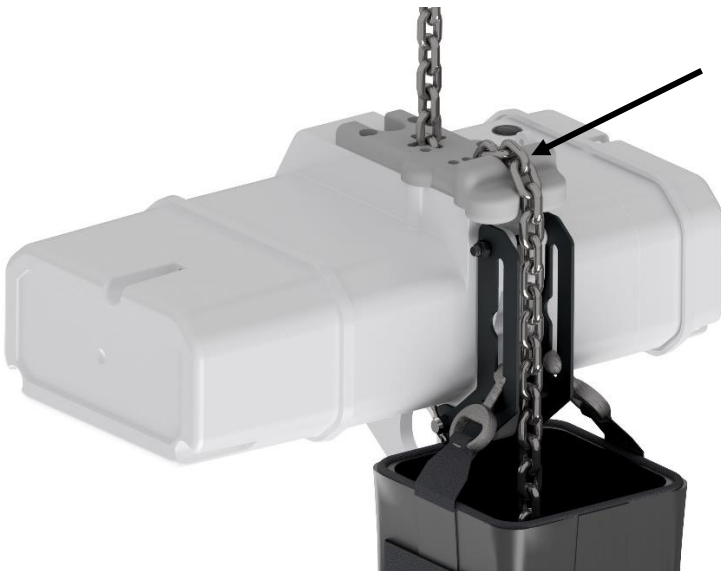


Figure 13: Attaching the chain box

4. Press button 'Lift' and let the chain run into the chain box by motor.
5. Check the fill level of the chain box.

3.1.6 Assembling the load chain in single fall version

1. Push the pull-in wire (special tool) into and through the chain guide cross plate as shown in Figure 14-A until the wire hook is pushed out on the opposite side.
2. Start with a flat chain link (Figure 14-A) and feed the chain end using the pull-in wire into the chain pocket.
3. Move the chain in by inching the control pendant (Figure 14-B).
4. Put the rubber buffer on the chain end and assemble the load hook (Figure 14-C).
5. Lower the load hook until only circa 0.5 m of the dead end of the load chain are left at the dead end side.
6. Attach the rubber buffer for the lift limiter onto the remaining dead end of the chain.
7. Attach the lift limiter onto the 3rd link of the dead end (Figure 14-D) in upright use and 0.5 m away from the end in case of inverted use.
8. Assemble chain box according to 3.1.5.
9. Allow the chain to run into the chain box and lubricate the entire length of the chain.

Let the dead end of chain run into the chain box by pressing the up button and using the hoist motor to prevent knots inside the chain box. Allow filling of the chain box only by running the chain through the hoist by using the motor. To prevent knots inside the chain box do not put the chain in the box directly.

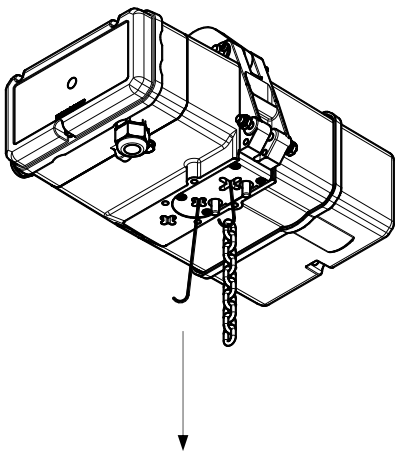


Figure 14-A

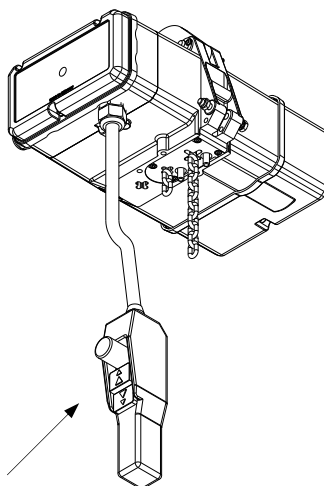


Figure 14-B

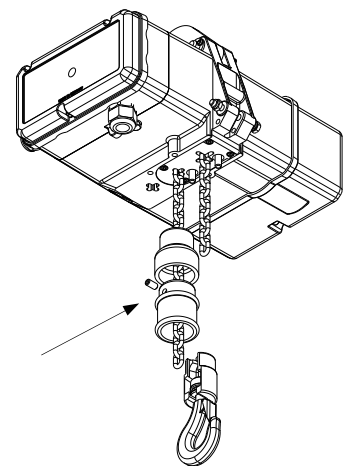


Figure 14-C

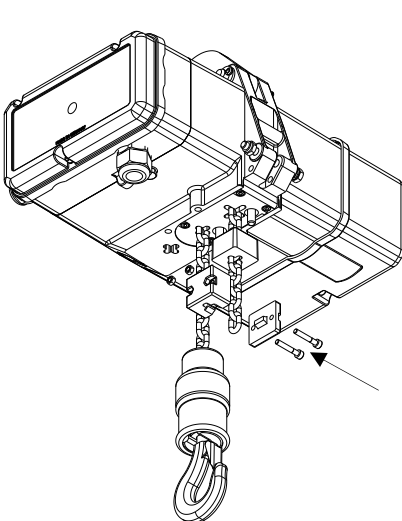


Figure 14-D

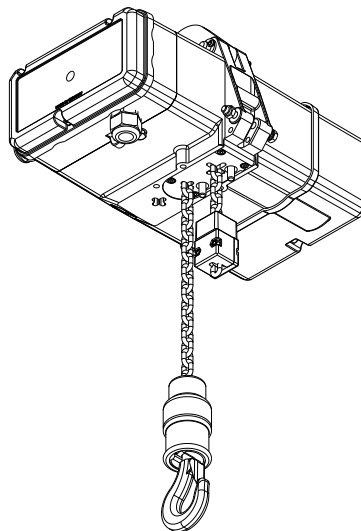


Figure 14-E

Figure 14: Assembling the load chain in single fall version

3.1.7 Assembling the load chain in double fall version

1. Insert the load chain into the hoist casing according to chapter 3.1.6.
2. Pull the chain through the hook block using the pull in wire (special tool) (Figure 15-A).

Caution! Never allow the chain to be twisted between the chain outlet and the hook block! If the assembly according to Figure 15-B or Figure 15-C is not possible without a twisted chain one chain link has to be cut and removed to allow correct assembly.
Do not turn or swivel the hook block around the horizontal axis between the two chain falls.



3. Loose the four screws (part no. 1 in Figure 16) of the chain guide, than take the chain guide out of the hoist (Figure 15 C) and pull the U-shaped fork back.
4. Pull the chain end from the hook up to the cross chain hole on the under casing of the hoist to the point where the first link protrudes inside the casing (Figure 15-C). Then the fork should be inserted into the hoist to capture this link (Figure 15-D). Pull hard on the chain to ensure that it is securely fixed.
5. Reassemble the chain guide into the hoist casing (Figure 15-E).
6. Recheck that the chain is not twisted.
7. Lubricate entire length of chain.

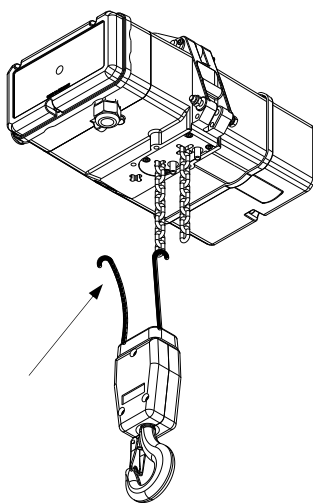


Figure 15-A

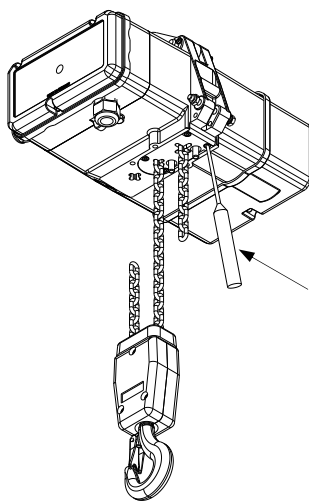


Figure 15-B

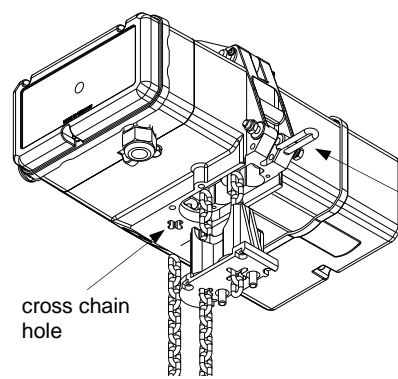


Figure 15-C

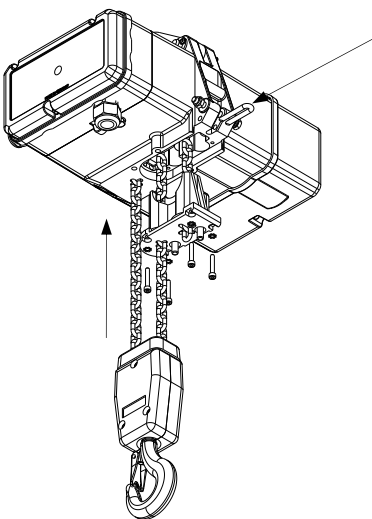


Figure 15-D

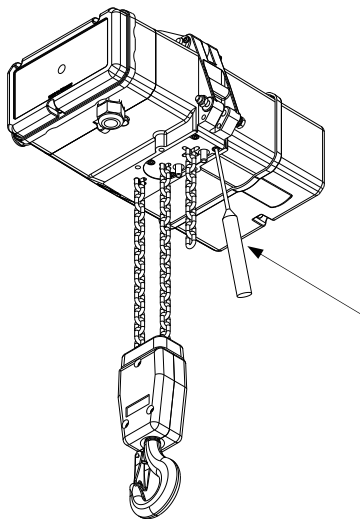


Figure 15-E

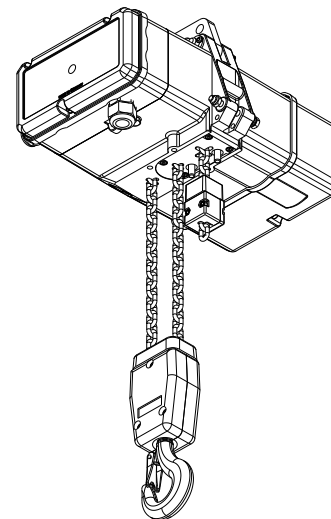


Figure 15-F

Figure 15: Assembling the load chain in double fall version

3.1.8 Replacing the load chain, the chain guide and the hold down

Caution! The chain guide and the hold down must also be changed when the load chain is being replaced.

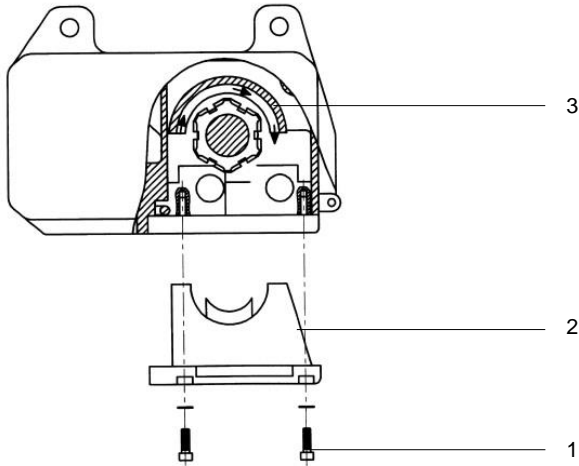


Figure 16: Replacing the load chain, the chain guide and hold down

Assembly instructions:

1. Let worn chain move out.
2. Loosen screws (1).
3. Take out chain guide (2).
4. Press the hold down (3) out, using a screwdriver.
5. Put a new hold down in by turning it through the groove over the sprocket wheel.
6. Push chain guide in and tighten the screws. Fit new chain in single fall or double fall designs as described in the preceding section.

3.1.9 Lift limiter

The lift limiter is used as the lower limit for the load hook position and has to prevent the running out of the dead end of the chain. The lift limiter is an emergency stop and cannot be used regularly as an operational limit switch.



If the lift limiter has a vulcanised metal washer, then this should be mounted towards the electric chain hoist body.

When using the electric chain hoist in inverted use, install the lift limiter approx. 50 cm before the end of the chain.

3.2 Electric connections

The electrical installation must comply with the relevant regulations. After having completed the installation checks have to be executed in accordance with the EN 60204-32:2008, section 19 or national regulations. Details of the control can be seen in the wiring diagram. The electric installation of the chain hoist complies with the currently valid EN 60204-32:2008.



3.2.1 Mains power

The main incoming line conductor must be able to be disconnected at all poles by means of a mains switch in accordance with EN 60204-32:2008 section 5.3. The installation of this switch is operator's responsibility.

Work on the electric installation may only be carried out by trained specialists. The equipment must first be disconnected from the mains power supply and to be secured against unauthorized switch operations.



Fuses (slowly blowing) at 400 V (3 phase) in front of main switch


	380 - 415 V / 50 Hz		440 - 480 V / 60 Hz		main fuse [A]	power cable	
	max. P [kW]	I [A]	max. P [kW]	I [A]		A [mm ²]	L max.[m]
63G2	0.7	1.6	0.84	1.6	6	1.5	220
63G4	0.37	1.1	0.44	1.1	6	1.5	220
71G2	1.1	2.4	1.3	2.4	6	1.5	220
71G4	0.75	1.9	0.9	1.9	6	1.5	220
80G2	2.2	4.6	2.6	4.6	10	1.5	130
80K4	1.5	3.4	1.8	3.5	6	1.5	220
90L2	3.0	6.2	3.6	6.2	16	1.5	80
90L4	2.2	5.2	2.6	5.2	16	1.5	80
100S2	4.0	10.7	4.8	10.7	20	1.5	50

Table 3: Fuses at 380-415 V / 50 Hz and 440-480 V / 60 Hz


	220 - 240 V / 50 Hz		250 - 275 V / 60 Hz		main fuse [A]	power cable	
	max. P [kW]	I [A]	max. P [kW]	I [A]		A [mm ²]	L max.[m]
63G2	0.7	2.8	0.84	2.8	6	1.5	120
63G4	0.37	1.9	0.44	1.9	6	1.5	120
71G2	1.1	4.1	1.3	4.1	10	1.5	70
71G4	0.75	3.4	0.9	3.3	6	1.5	120
80G2	2.2	8.1	2.6	9.7	20	1.5	30
80K4	1.5	5.9	1.8	6.1	16	1.5	40
90L2	3.0	10.7	3.6	10.2	25	1.5	30
90L4	2.2	8.95	2.6	8.95	25	1.5	30
100S2	4.0	18.5	4.8	18.5	32	2.5	50

Table 4: Fuses at 220-240 V / 50 Hz and 250-275 V / 60 Hz

Check if the mains voltage complies with that specified on the type plate.
Connect mains supply lines and control line in accordance with wiring diagram.



The L1, L2, L3 and PE terminals for the mains connection are located under the cap for gear cover.
The line 3 + PE cable (minimum cross section 1.5 mm²) are necessary for the connection.

To ensure proper function, the mains connection must be made to the clockwise rotating field and corrected in case of deviation. If executed correctly, the hoist executes the lifting when the 'UP' button is pressed.

After connection, press the button for lifting. If the load moves downwards, the wires L1 and L2 must be exchanged (disconnect the system from the mains supply before!).

If the control is equipped with an emergency stop according to EN 60204-32:2008, this red mushroom-shaped button is located on the control pendant.



In accordance with European regulations, a main crane switch must be installed in addition to the emergency stop. The main crane switch must be switched off after daily operation.

The use of the emergency stop does not constitute the correct shutting down of the equipment.

The connection terminals for the control cable and the electric trolley are located under the gear cap.

3.2.2 Operating voltages

The standard power supply of the electric chain hoists is 400 V, 3 ph, 50 Hz.

The electric chain hoists are suitable for the operation with a voltage range of 380 - 415 V, 3 ph, 50 Hz.

Different voltages and frequencies are available.
They are marked on the motor plate.



3.2.3 Direct control

The controlling of the motor is directly carried out by the control pendant.

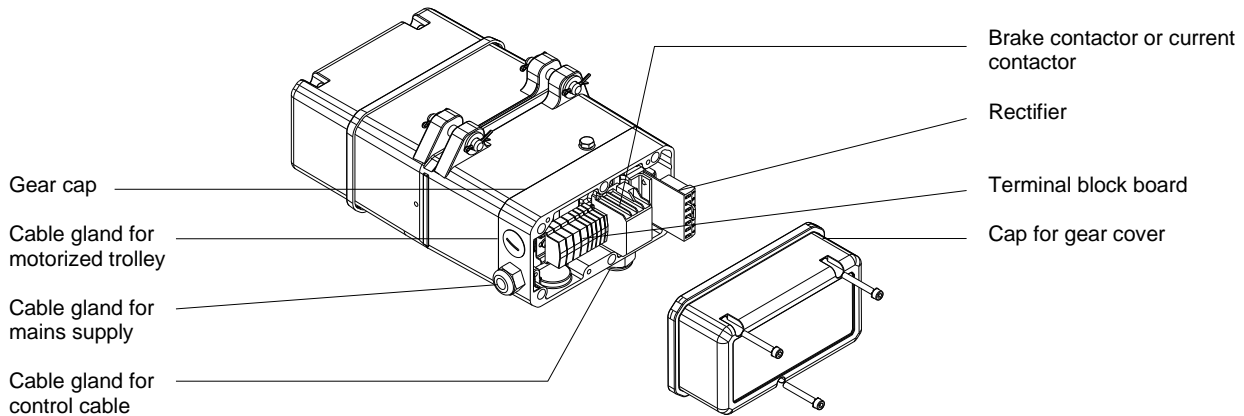


Figure 17: Direct control

3.2.4 Low voltage control

The control occurs in a control circuit, which receives its 24 V control voltage by a control transformer.
Other control voltages are available on request.

If the control is equipped with an "emergency stop" in accordance with DIN EN 60204-32:2008, an additional contactor is also located in the control box and the "emergency stop" button is fitted on the control pendant.

The control contactors are easily accessible on a console under the cap for control.

The limit switches for lifting and lowering are situated under the cap for brake.

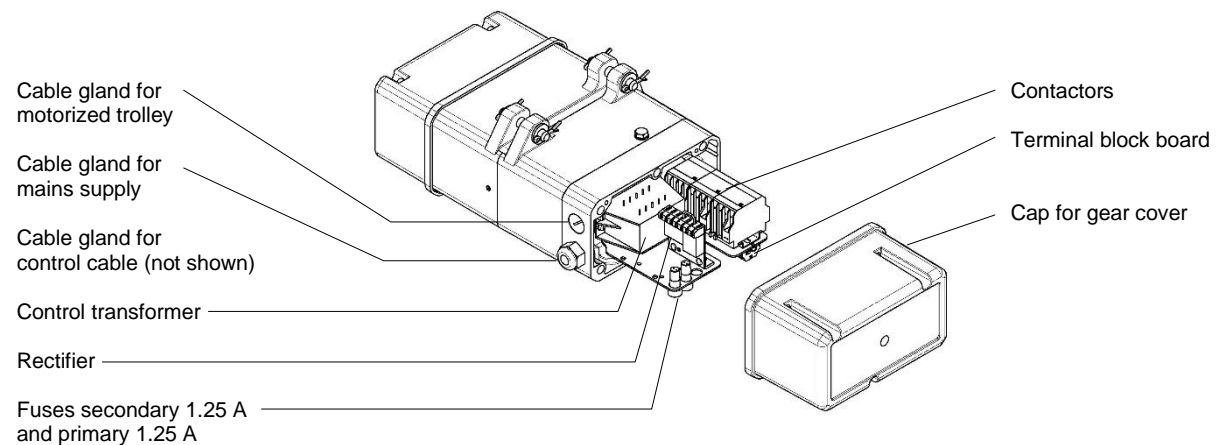


Figure 18: Low voltage control

3.2.5 Electrical limit switches for lift limiting

The electric chain hoists with low voltage control will be equipped with electric limit switches for lift limitation of the highest and lowest load position on request.

These limit switches are operated by two buttons, protruding out of the chain guide, which can be activated either by the hook (top limit) or lift limiter (bottom position).

During first operation it has to be checked that the symbols on the control pendant are in accordance with the moving direction of the load hook (see chapter 3.2.1) and that the movement will be safety stopped by switching the relevant limit switch.

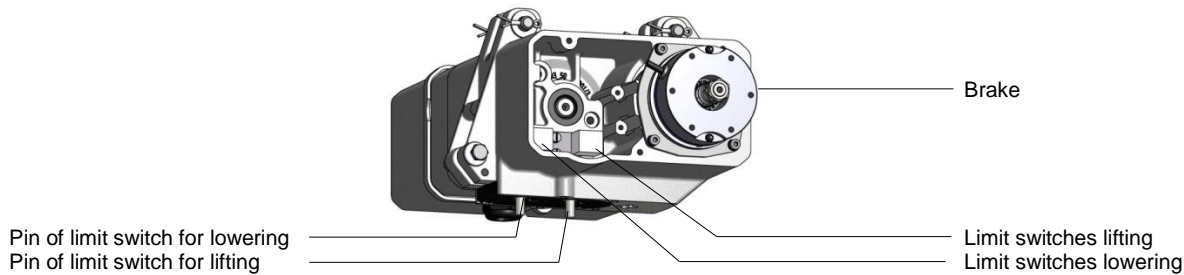


Figure 19: Electric limit switches

3.3 Configuration of electric chain hoists according to DGUV V17 (BGV C1)

All electric chain hoists according to DGUV V17 (BGV C1) can be applied in normal (upright) or inverted use.



- Emergency stop according to EN 60 204-32:2008 to interrupt all power operated movements
- Two independently from each other operating brakes according to DGUV V17 (BGV C1) §8 (2)
- Mechanic or electronic slack chain prevention, to avoid slack chain in case of unexpected strain relief; switching point ca. 10% of nominal load according DGUV V17 (BGV C1) §8
- Electronic overload protection to switch off lifting at more than 120 % of the rated load
- Operating limit switch according to DGUV V17 (BGV C1) §8:
 - for version with external operating limit switch
The limit switch 'lifting' is activated by an additional limit switch assembled on load chain.
 - for version with gear limit switch:
The gear limit switches for 'lifting' and 'lowering' are assembled near the braking magnet. The acting points are adjustable.
 - for version with incremental encoder
- The incremental encoder for lifting and lowering is assembled near the braking magnet (alternatively or additional to the gear limit switch).
- Emergency limit switch according to DGUV V17 (BGV C1) §8
- When using external limit switches the additional assembled lift limiter activates the emergency limit switch for lifting if the operating limit switch was passed.
- If the operating limit switch for lowering was passed the lift limiter runs onto the hoist casing and the sliding clutch acts like an emergency stop.
- Thermal overload device to protect the lifting motor for impermissible overheating (optional accessory). The thermal overload device interrupts the current supply of the emergency stop contactor and switches back after cooling time automatically. To restart the chain hoist the green button designation 'ON' has to be pressed.
- The sliding clutch, used in all hoists, prevents the overload of the chain hoist and of the facilities. Due to the configuration of the sliding clutch the function of the brakes is not affected.

3.4 Limit switches in upright use

Available equipment \ Required function	Four-traced gear limit switch	Four-traced gear limit switch and two external limit switches
Operation limit switch for lifting	Gear limit switch BO	Gear limit switch BO
Operation limit switch for lowering	Gear limit switch BU	Gear limit switch BU
Emergency limit switch for lifting	Gear limit switch NO	External limit switch
Emergency limit switch for lowering	Gear limit switch NU	External limit switch

Table 5: Limit switches in normal use

3.5 Limit switches in inverted use

If the electric chain hoist is applied in inverted use the chain leaves and enters the electric chain hoist at the top.



For the assembly of the electric chain hoist the load hook at the end of the load chain has to be fixed on the suspension and the hoist “climbs up”. Is it not necessary to do maintenance works on a catwalk, because the electric chain hoist can be lowered down to the deepest load position. Only the test of the load hook must be done at the suspension point and the lubrication of the load chain must take place over the full length of the chain.

The chain guide plate is assembled onto the chain guide to divert the outgoing chain safely into the chain box.

All limit switches have to be gear limit switches.

The lift limiter has to be assembled approximately 0.5 m from the end of the chain. Therewith it is ensured, that enough chain weight for moving the chain safely into the chain box is left over, even if the hoist has reached its lowest lifting position.

Available equipment \ Required function	Four-traced gear limit switch
Operation limit switch for lifting	Gear limit switch BO
Operation limit switch for lowering	Gear limit switch BU
Emergency limit switch for lifting	Gear limit switch NO
Emergency limit switch for lowering	Gear limit switch NU

Table 6: Limit switches in inverted use

3.6 Operation and emergency limit switches

3.6.1 Gear limit switches

There are four-traced gear limit switches available as standard, but for special constructions are six-traced gear limit switches too.

The ON/OFF- positions are adjustable.



If a four-traced gear limit switch is fitted, one lifting and one lowering position are used for the operation (BU and BO) and the other two positions for the emergency limits (NU and NO).

The low voltage control panel contains two buttons to bridge the operation limit switches to allow the hook or end stop reaching the ultimate positions to be able to adjust these positions on the limit switch or to test this unit (see wiring diagram).

It has to be observed, that after having actuated the emergency limit switch for lifting, the hoist can be reset from end position as follows:

- Press the green button “ON” on the control pendant.
- Press the “DOWN”-button until the hoist leaves the end position.

These steps have to be executed by a trained specialist during testing of emergency limits or after having hit an emergency limit switch.

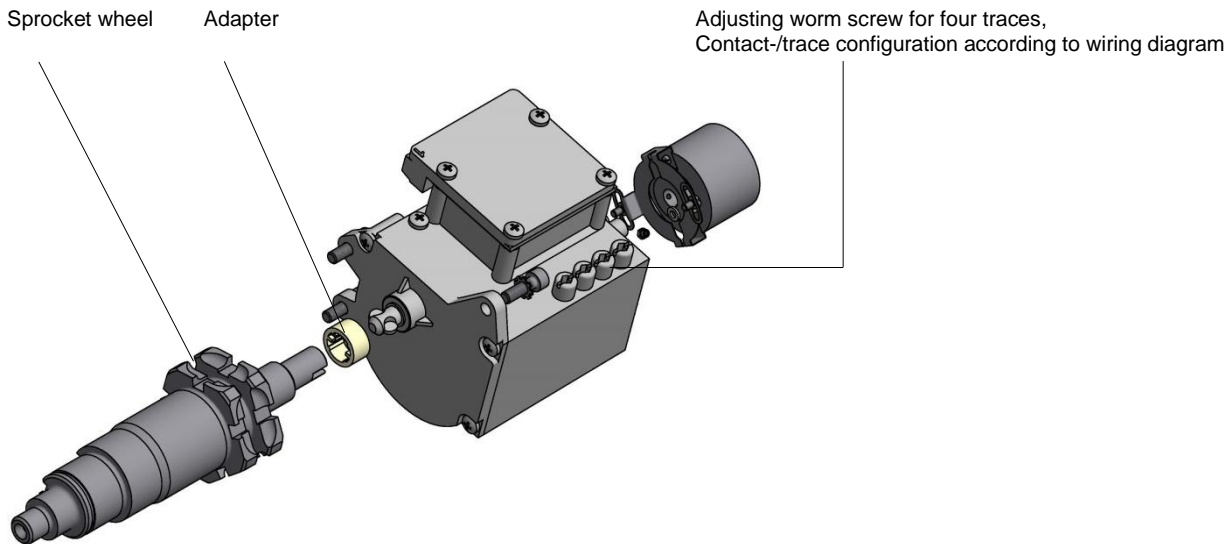


Figure 20: Gear limit switch as operation and emergency limit switches

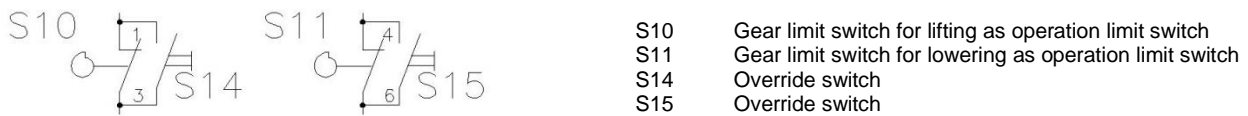


Figure 21: Override switches for operation limit switches

Adjustment of gear limit switches:

Lifting (NO, BO): Turn adjusting worm screw clockwise → Highest hook position will be higher
 Lowering (NU, BU): Turn adjusting worm screw clockwise → Lowest hook position will be lower

3.6.2 External emergency limit switches

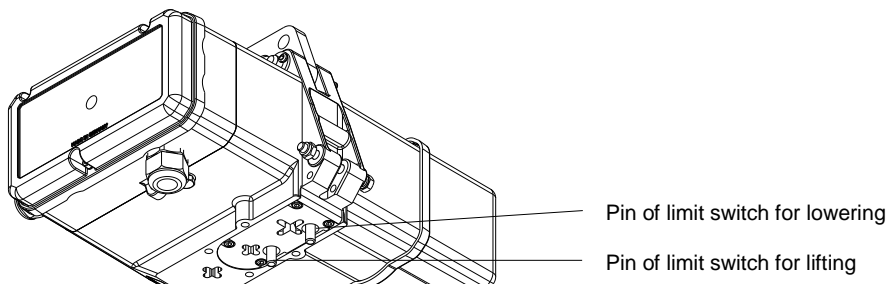


Figure 22: External emergency limit switches

Caution! The emergency limit switches should not be used as operation limit switches.

This unit will be actuated by the load hook or by an additional lift limiter mounted on the load chain.



It is available in addition to an internal operation limit switch for ultimate lift limiting. This switch is electrically connected to the emergency contactor.

If this limit has been hit, only lowering will be possible, if the button for lowering and the green “ON” – button at the pendant (if included in the delivery) is pressed at the same time.

A trained specialist has to be called in to double-check why the operation limit switch has failed.

3.7 Incremental encoder

This assembly group can be fitted to all hoists for normal (upright) or inverted use. The incremental encoder provides impulses depending on the revolutions of the sprocket wheel, which can be read by a special control circuit or a computer control.

The standard incremental encoder provides 100 impulses per revolution. Incremental encoders can be fitted additionally onto the extended shaft of a gear limit switch.

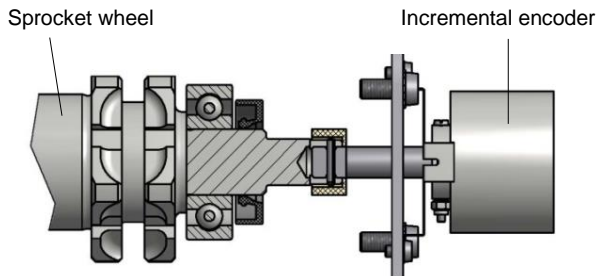


Figure 23: Sprocket wheel with fitted incremental encoder

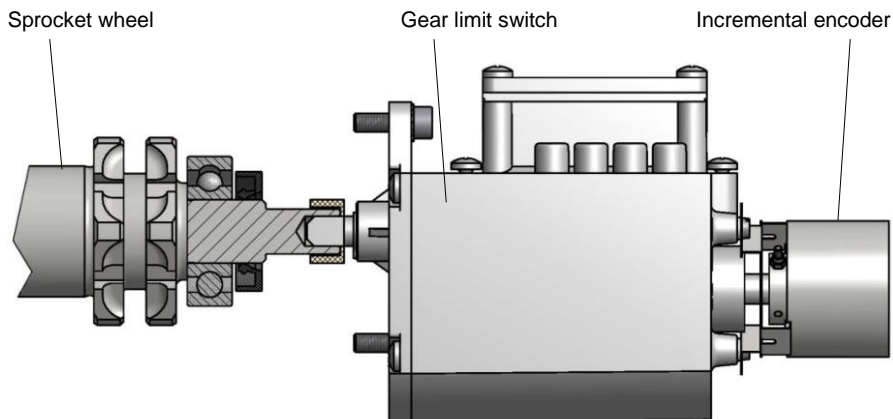


Figure 24: Sprocket wheel with fitted gear limit switch and incremental encoder

3.8 Mechanical underload protection

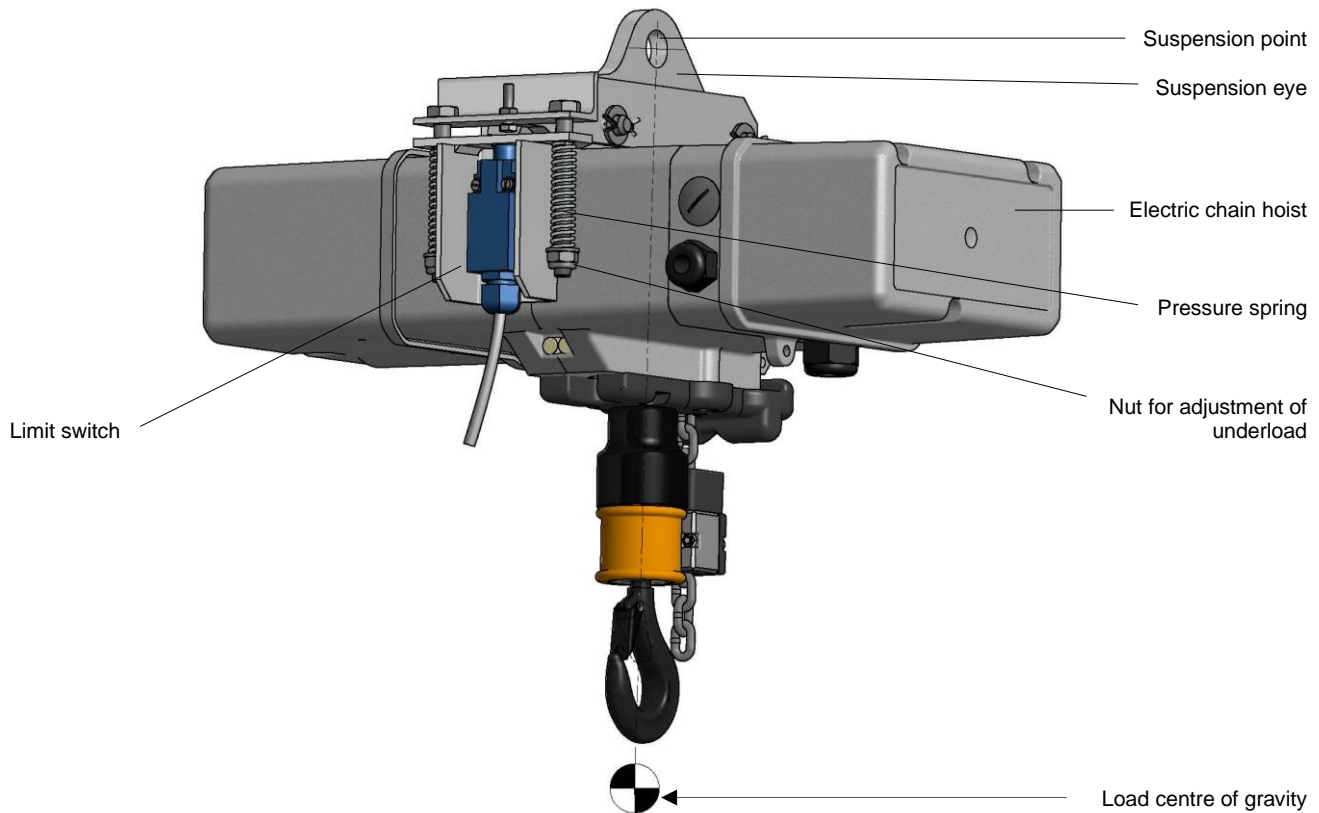


Figure 25: Construction and function of mechanical underload protection

The suspension eye is fixed at the electric chain hoist. It can move up and down at one bolt to indicate the load and swivels around the other bolt.

The pressure springs will be adjusted by self-locking nuts.

If the load on the hoist is less than the set value the suspension eye will swivel around one suspension bolt and activate a limit switch on the opposite side. This switch cut off the power for lowering.

The spring-loaded underload protection is adjusted on approximately 10 – 15 % of the nominal load by the manufacturer.

After operation of the underload protection a lifting movement will still be possible to move out of a dangerous condition.

For set up mode without load the override switch and the function switch ,Down‘ must be pressed simultaneously.

Caution! The operation of the override switch is allowed in set up mode only.



3.9 Electronic overload and underload protection

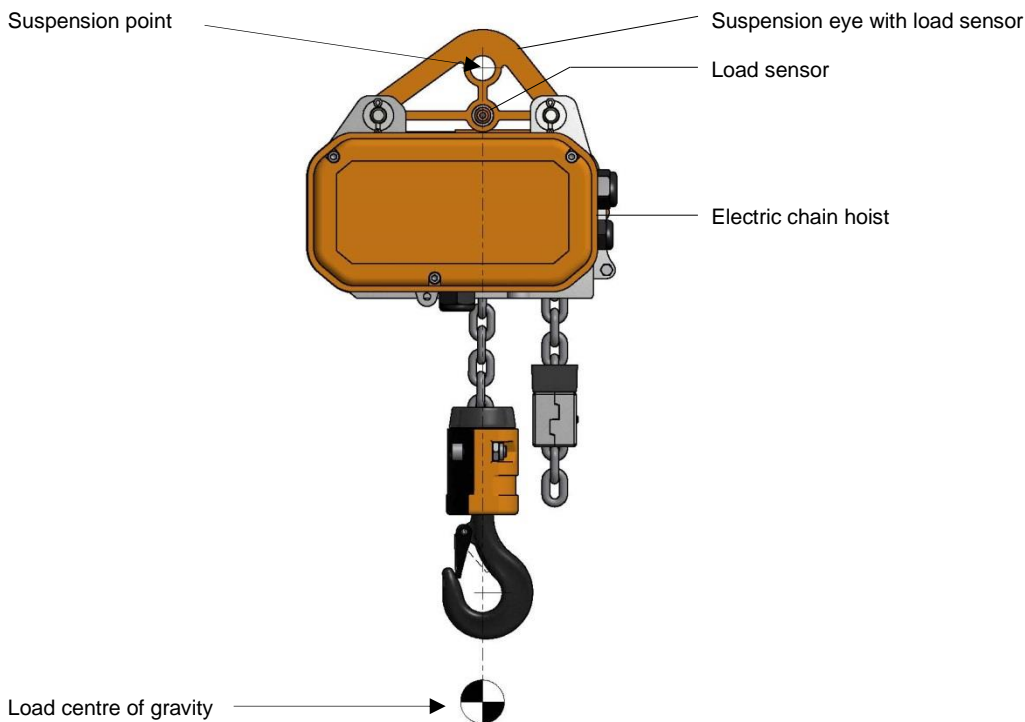


Figure 26: Suspension eye with load sensor

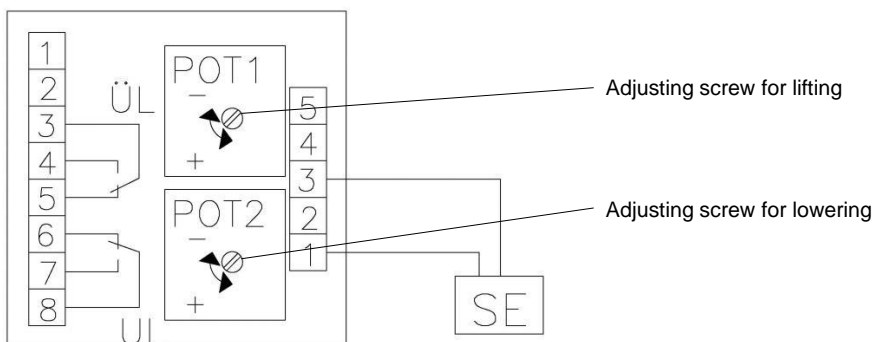


Figure 27: Comparator

The indirect acting overload and underload protection measures the load by means of an sensor and switches off the control path for lifting (in case of overload) or lowering (in case of underload).

The threshold values can be adjusted by means of adjusting screws:

Left turn:	LED on	Threshold values higher
Right turn:	LED off	Threshold values lower

The current status is shown as follows:

Overload ready:	LED on	Overload trip:	LED off
Underload ready:	LED off	Underload trip:	LED on

Selection criteria of load sensing equipment

Notes on the use of suspension eyes with load sensor

Possible applications	Fixed installations with load display
Advantages	load detection of all loads suspended under the suspension eye with load sensor; chain weight does not falsify the measurement result
Disadvantages	no protection against internal overload cable between suspension eye and chain hoist housing can be accident-sensitive

3.10 Control pendant

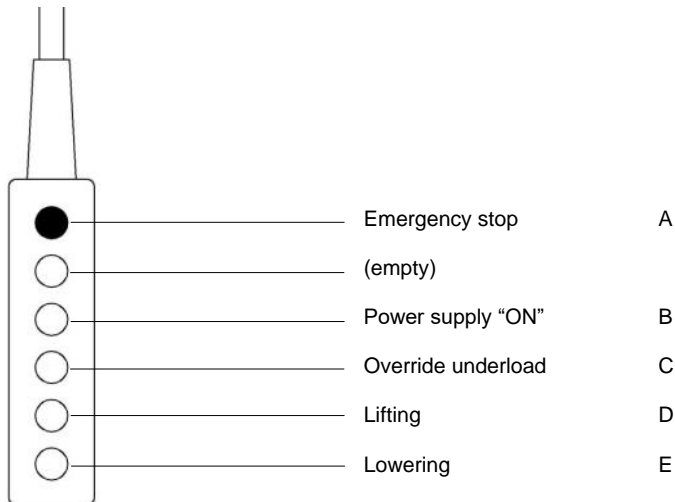


Figure 28: Control pendant

A: Emergency stop

The red mushroom button switches off the control and all working movements.



B: Power supply „ON“ (DGUV V17 only)

(After switching on the main switch for the whole lifting system.)
After an emergency limit switch has been actuated or after the emergency stop has been pressed the power can be switched on again with this button.



If an emergency limit switch has been actuated the operation limits have to be inspected by a specialist and the cause for the malfunction has to be rectified.

After actuating an emergency limit switch and switching on the power the hoist can only be operated into the opposite direction.

C: Bridging slack chain prevention (DGUV V17 only)

To lower load by pressing this button and lowering if the hook is underloaded or with less than 10-15% of the nominal load (lifting movement will be possible) (especially for setting a scenery)



The switch 'override underload' should be used for lowering movement without load in set up mode. After setting up and releasing of the override switch the function 'lifting' is only possible to move out of the set up position.



D: Button for lifting the load

E: Button for lowering the load

4 Electric chain hoist with trolley

4.1 Types of trolleys

All trolleys are suitable for

- flanges with small width in accordance with DIN 1025 and European regulations 24-62
- flanges with medium width in accordance with DIN 1025
- flanges with large width in accordance with DIN 1025




Caution! Elastic bumpers, with contact area at approximately the centre of the running wheels, must be mounted as limit stops at each end of the track.




Additionally, the trolley can be fitted with an electric cross limit switch. Actuating bars at the travelling girder must be installed by the user.


Push trolley

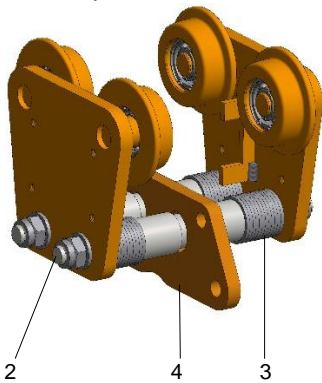


Electric trolley with low voltage control

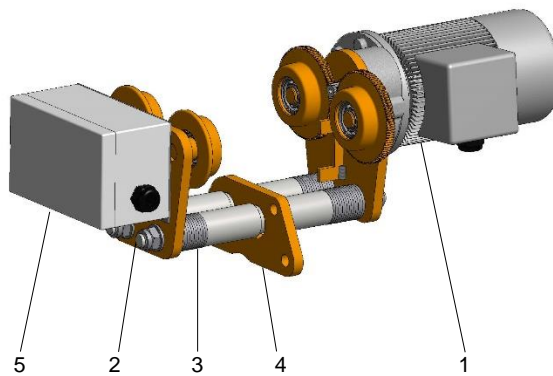

Push trolley with one suspension bolt (crane component)

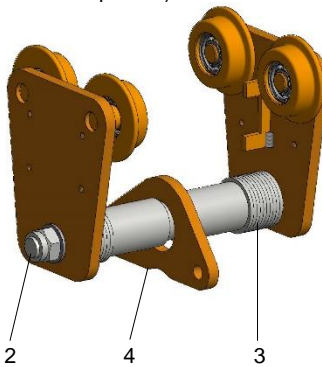

Electric trolley with one suspension bolt and low voltage control (crane component)

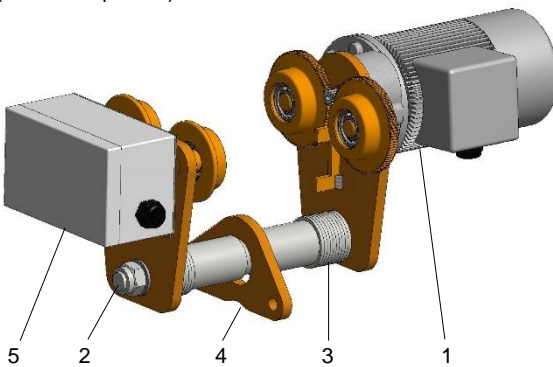

- 1 Travel motor
- 2 Connecting bolt
- 3 Distance washers
- 4 Suspension eye
- 5 Low voltage control (optional)

Figure 29: Trolleys

4.2 Permissible curve radius

Trolleys with max. load - double fall (kg)	Chain dimension (mm)	Radius of curve (m)
up to 2000	5x15; 5.2x15; P 5,4x15; 7x22; 7.2x21; P 7.4x21.1	1
up to 5000	10x28; 10.5x28.2	2

Table 7: Curve radius

Caution! If the electric trolley has to run along curves the travel motor has to be assembled at the outer side of the curve at all times.



4.3 Horizontal movement of electric chain hoists

If electric chain hoists are suspended on electric trolleys, the equipment has to be set up in a way that collisions between the crane and other parts of the crane environment are prevented.

For trolleys equipped with electric limit switches, the actuating bars have to be installed in such a manner by the user, that the travelling movement is stopped securely before the trolley hits the end rail stoppers or buffers.

If two or more hoists are operating on the same girder with one load suspended on common load hooks, the trolleys have to be connected with a distance rod to prevent a collision of the trolleys.

Electric chain hoists with motorised horizontal movements:

Please make sure that only trolleys or other machines are used which are suitable and approved for the required load capacity.



4.4 Attachment of lightening devices to electric chain hoists

Lightening devices and their corresponding structures have to be attached from special scaffolds, approved working platforms or similar safe positions only.



4.5 Mechanical assembly

4.5.1 Assembly position of the trolley on the electric chain hoist

Version with direct control

Version with low voltage control

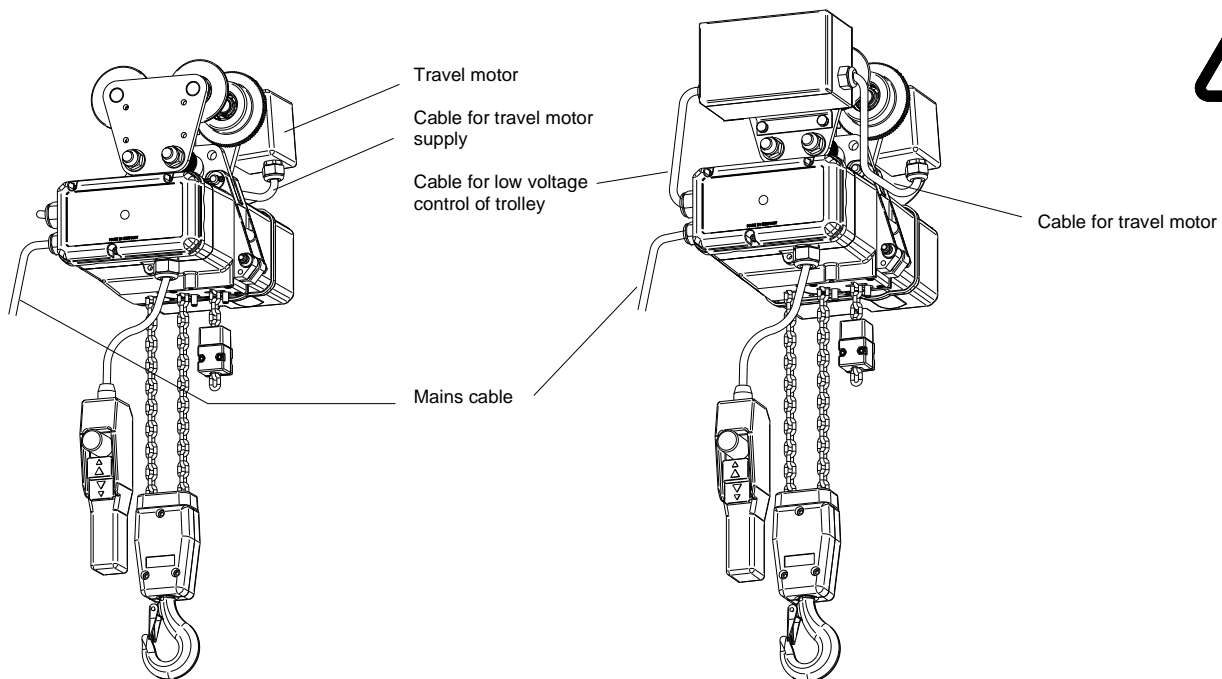


Figure 30: Assembly position of the trolley

4.5.2 Assembly of the trolley with two connecting bolts

The two trolley connecting bolts are to be fixed to the lateral boards so as to allow a clearance of one to two millimetres between the running wheel flange and the girder flange. The width is adjusted by inserting spacing washers **symmetrically**. The suspension eye is mounted between the spacing bushes on the trolley connecting bolts.



Tighten the nuts of the connecting bolts with a torque wrench.

Hexagon nuts	Tightening torque (Nm)
M16x1.5	75 Nm
M22x1.5	150 Nm
M36x1.5	560 Nm

Table 8: Tightening torques

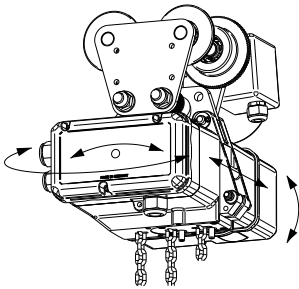


Figure 31: Flexibility between chain hoist and trolley

Caution! Movement in the directions shown by the arrows must be possible between the hoist and the trolley when assembly is complete. The suspension eye must be selected in accordance with the particular type of chain hoist and the assembled trolley (flange width).



4.5.3 Assembly of the trolley with one connecting bolt

One trolley connecting bolt is to be fixed to the lateral boards so as to allow a clearance of one to two millimetres between the running wheel flange and the girder flange.

The width is adjusted by inserting spacing washers **symmetrically**. Tighten the nuts of the connecting bolts with a torque wrench. Take care, that the spacing bushes shall not be braced! The relevant tightening torques are listed in Table 8.



4.6 Electric trolleys with counterweight

If electric trolleys, especially with double speed, are used on girders with a very small width it may be necessary to provide a counterweight which prevents tipping up of the trolley. This unit can be retrofitted to each trolley. This kit does not influence any features of a standard trolley.

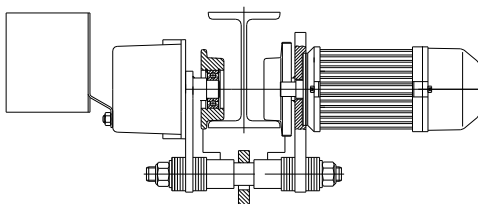


Figure 32: Counterweight on electric trolleys

4.7 Electric connection of electric trolleys

Direct control

An electric cable clearly labelled which is approximately 0.5 m long is located on the travel motor of the electric trolley for connecting to the electric chain hoist. The terminals are situated in the electric chain hoist casing. Connection should be carried out as shown in wiring diagram.

The control pendant has push buttons for controlling the travel motion. The motorized trolley for fast and low travelling speed has push buttons with two-step switches.

Low voltage control

The contactors for switching the trolley motor are located in a contactor box. The contactor box must be assembled with two hexagon socket head cap screws M8x10 DIN 933 on the side-plate.

Connect the two leads protruding from the contactor box to the terminal section of the electric chain hoist and to the trolley motor as shown in the wiring diagram.

After electric connecting, check that the electric chain hoist and the trolley are working correctly.

5 Initial operation

5.1 Initial operation according to DGUV V54 (BGV D8)

According to the definition of the Machinery Directive, initial operation is the first use of the electric chain hoist by the operator. This may only be carried out when the electric chain hoist meets the requirements of the relevant EC directives and has been verified and documented by the EC declaration of conformity and CE marking.

5.2 Initial operation according to DGUV V17 (BGV C1)

The test before first initial operation has to be done by an authorised person in accordance with §33, DGUV V17 (BGV C1) and should be arranged by the owner.

Before first initial operation the owner of such facilities and all operating personnel have to familiarize with the legal regulations according to chapter 1.1 and specific rules of stage and studio technologies in particular:

- DIN 56950-1:2012 Entertainment technology - Machinery installations – Part 1: Safety requirements and inspections
- DGUV V17 (BGV C1) Accident-Prevention Regulation Staging and production facilities for the entertainment industry



6 Tests

The use of the electric chain hoists is possible in accordance with:

- DGUV V54 (BGV D8) - Accident prevention regulations „Winches, lifting and pulling equipment“
- DGUV V17 (BGV C1) - Accident prevention regulations „Staging and production facilities for the entertainment industry“
- DGUV V52 (BGV D6) - Accident prevention regulations „Cranes“
- DIN 56950-1:2012-05 - Entertainment technology - Machinery installations - Part 1: Safety requirements and inspections
- IGWV SQP2:2018-10 - Electric Chain Hoists

The dynamic and static tests are accomplished according to EC Machinery Directive by manufacturer. The factory test is certified in the Inspection book.

The user of the chain hoist has to determine the test before initial operation and the regular tests.

Basically, the EC Machinery Directive point 4.1.3 'Fitness for purpose' applies here.



6.1 Test when used according to DGUV V54 (BGV D8) §23 - Winches, lifting and pulling equipment

A trained specialist must test the equipment before starting operation for the first time and after extensive alterations.

6.2 Test when used according to DGUV V52 (BGV D6) §25 - Cranes

An authorised person must test the cranes before starting operation for the first time and after extensive alterations. The electric chain hoists are type tested.

6.3 Regular tests

- A trained specialist must test the equipment, cranes and supporting structures minimum once a year. It may be necessary to carry out tests more often if the operating conditions are very harsh, that means for example high percentage of use with full load, dusty or aggressive environment, high duty rate, high number of operation cycles.
- **Experts** for the inspection of cranes are the experts from the TÜV, the professional associations and the inspection experts in accordance with the Industrial Safety Ordinance.
- **Trained specialists** are highly qualified specialist personnel or the manufacturer's after-sales service personnel.

6.4 Additional tests according to DGUV V17 (BGV C1) and IGWV SQP2

Electric chain hoists should be tested in accordance with Accident Prevention Regulation DGUV V17 (BGV C1) and DGUV G315-390 (BGG 912).

Maintenance work on electric chain hoists has to be carried out by trained specialists only. The main switch has to be switched off and the working area is to be secured beforehand.



The yearly test has to be done by trained specialists and minimum each fourth year by an authorized person (DGUV V17 (BGV C1), §34).

The manufacturer recommends that test and maintenance works should be done by an authorized person due to the use of the electric chain hoists in the immediate vicinity of people or over them.

In accordance with chapter 3 and following parts and assembly groups on the electric chain hoists have to be checked particularly:

- The test includes a visual inspection for deformation and tears as well as a dimensional check for wear and tightness of the screw connections.
- Function and fastening of the limit switches.
- Checking that the dead end of the chain runs smoothly into the chain box.
- Check the electronic overload and underload protection; check the cable for integrity.
- Function of the operational and emergency limit switches (DGUV V17 only).
To test the function of the emergency limit switches NO and NU, press the corresponding pushbutton (S13 for BO; S14 for BU) to bypass the operational limit switch.
- Function of the underload protection at approx. 10 % of the nominal load (DGUV V17 only).

7 Maintenance

- Trained specialists must carry out all maintenance work.
- The Table 9 lists the parts and functions to be tested and the necessary maintenance work. Defects must be rectified immediately by a trained specialist. Defects have to be reported immediately to the owner. The owner is responsible to get defects remedied by a trained specialist.
- Maintenance work may only be carried out if the electric chain hoist is not loaded and the main switch is switched off so that the power supply is disconnected.
- In case of very harsh operating conditions, e.g. multi-shift operation, high number of switching actuation, poor environmental conditions, the periods between maintenance works must be shortened.



Checking for wear

- Check suspension hook and load hook for deformation (measure punch spacing) and rusting, cracks and the general condition.
- The chain sprocket in the hook block must be replaced if the running surface is worn by about 1 mm.
- Check the load chain according to chapter 7.10.2
- **Replace all rubber buffers if worn!**



7.1 Maintenance and checks

Note chapter 1 !

The following time periods are estimated, they may have to be shortened due to hard operating conditions (two or three shifts, high percentage of work with nominal load, dusty or high temperature environment) this maintenance work has to be done more frequently.

	Check		
	daily	every 3 months	yearly
Visual check of general condition of the equipment	•		
Functional check of the brake of the lift limiter	•	•	
Check of the brake, air gap according to 7.2 ff.			•
Maintenance and adjustment of the clutch			•
Wear of the load chain according to 7.10		•	
Lubrication of the load chain		•	
Wear of the rubber elements (visual check)	•		
Lubrication of the hook tackle and hook block acc. to 11.3 /, check condition of the pin which prevent the hook nut from loosening and chisel punch marks			•
Check condition of safety latch	•		
Universal checks of all screws hold down, chain guide, non-twisted chain safety devices			• • •
Check of the condition and safe positioning of the chain box in particular, the wear of the textile material		•	
Check of the electric cable, power cable and pendant control			•
Check of the trolleys and wheels			•

Table 9: Test and maintenance works

The electric chain hoist is designed in accordance with FEM 9.511. According to FEM 9.755 the residual safe working period must be established and documented every year.

If the residual safe working period calculations are fully available, then the electric chain hoist must be subjected to a general overhaul when the theoretical safe working period has been reached.

If the usage of the electric chain hoist is not certified, then pursuant to FEM 9.755 the general overhaul must be carried out not later than after 10 years.



7.2 Single brake

7.2.1 Description of the single brake

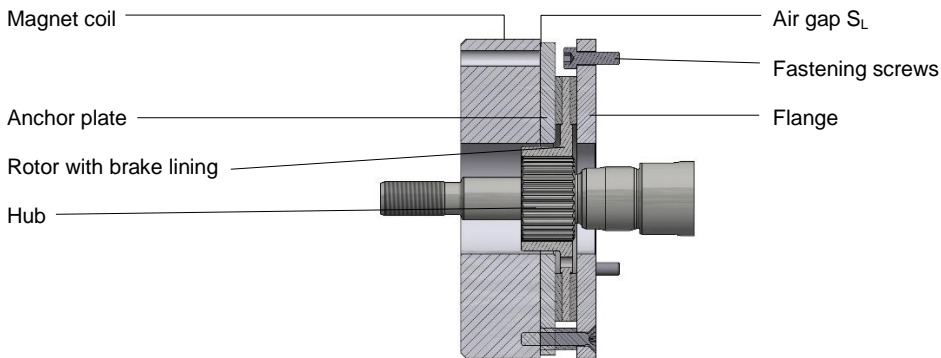


Figure 33: Construction of the brake

7.2.2 Replacement of the brake

Caution! All assembly and disassembly works should be done without load.
The electric chain hoist should be completely disconnected from power (Power off).

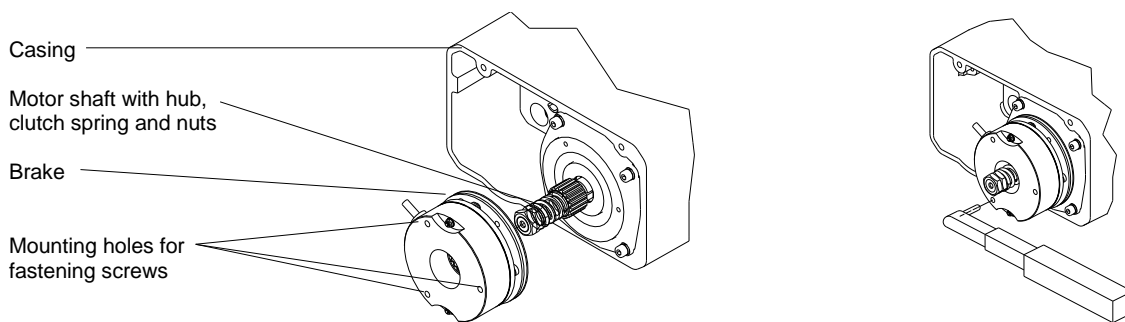


Figure 34: Assembly of the brake

1. Loose screws of cap for gear cover.
2. Remove cap.
3. Disconnect brake cables.
4. Loose screws of cap for brake.
5. Remove cap for brake.
6. Loose the fastening screws of brake unit.
7. Remove worn out brake unit from the hub.
8. Fit new brake unit onto the motor shaft.
9. Fit the brake unit using the cylindrical screws.
10. Tighten the screws evenly (tightening torques see table).
11. Connect brake cables according to wiring diagram.
12. Replace cap for gear cover and cap for brake.

Type	Brake Type	Screws DIN 912	Tightening torque [Nm]	Coil resistance R20 nominal [Ω]	Air gap S_L nominal [mm]	Air gap S_L maximal [mm]
SK03../...	BFK 457-06	3xM4	2.8	2101	0.2	0.5
SK07../...	BFK 457-08	3xM5	5.5	1681	0.2	0.5
SK10../...	BFK 457-12	3xM6	9.5	1051	0.3	0.8

Table 10: Data of the brake

Caution! For order of spare parts the complete type of the electric chain hoist has to be submitted.



7.3 Double brake SK03../...

7.3.1 Construction of the double brake SK03../...

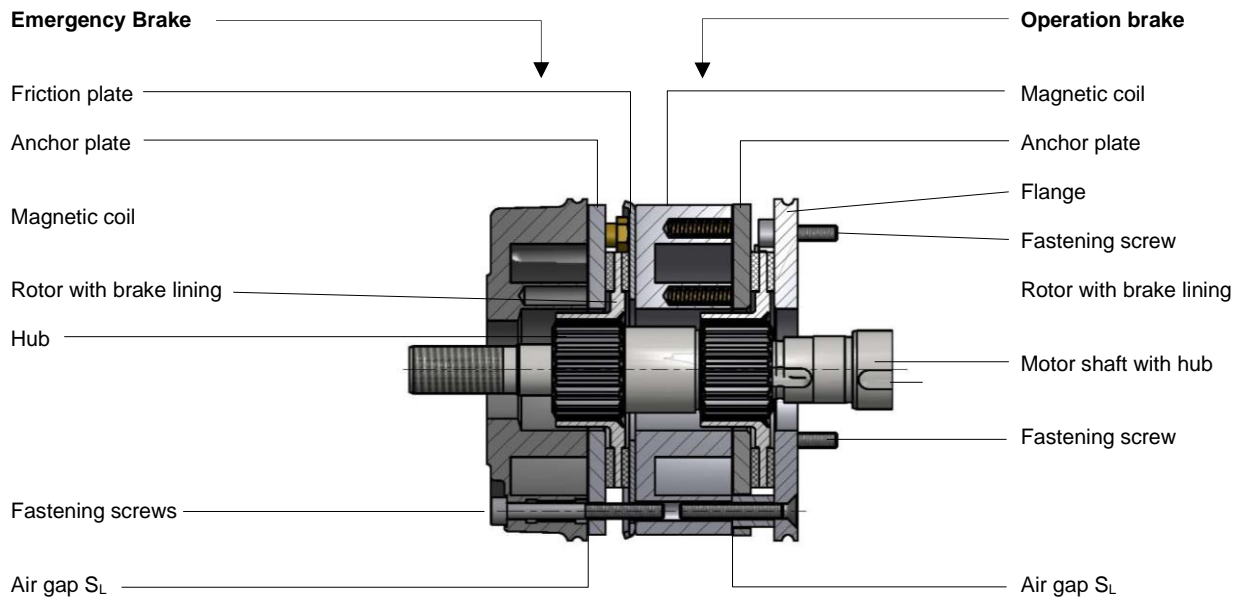


Figure 35: Construction of the brake SK03../...

7.3.2 Replacement of the brake SK03../...

Caution! All assembly and disassembly works should be done without load.
The electric chain hoist should be completely disconnected from power (Power off).

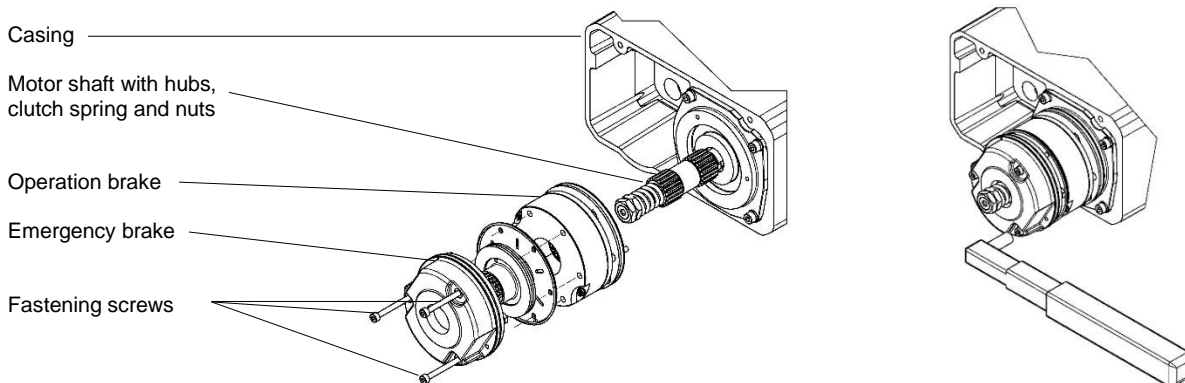


Figure 36: Replacement of the brake SK03../...

1. Loosen the screws of the cap for brake.
2. Remove the cap.
3. Disconnect brake cables.
4. Loosen the fastening screws of the emergency brake.
5. Pull the worn emergency brake off the hub.
Caution: Magnetic coil, rotor and friction plate are individual parts.
6. Loosen the fastening screws of the operation brake.
7. Pull the worn operation brake off the hub.
8. Fit the new operation brake onto the hub of the motor shaft.
9. Screw the operation brake to the motor cover with the fastening screws.
(For tightening torques see table)
10. Place the friction plate, rotor and magnetic coil of the emergency brake onto the hub.

11. Screw the emergency brake to the operation brake with the fixing screws.
(For tightening torques, see table.)
12. Connect the brake cables according to the wiring diagram.
13. Mount the caps.

Type	Operation brake	Emergency brake	Screws DIN 912	Tightening torque [Nm]	Coil resistance R20 nominal [Ω]	Air gap S_L nominal [mm]	Air gap S_L maximal [mm]
SK03../...	BFK 457-06	BFK 458-06	3xM4	2.8	2101	0.2	0.5

Table 11: Data of the brake SK03../...

Caution! For order of spare parts, the complete type of the electric chain hoist has to be submitted.



7.4 Double brake SK 07../... and SK10../...

7.4.1 Construction of the double brake SK 07../... and SK10../...

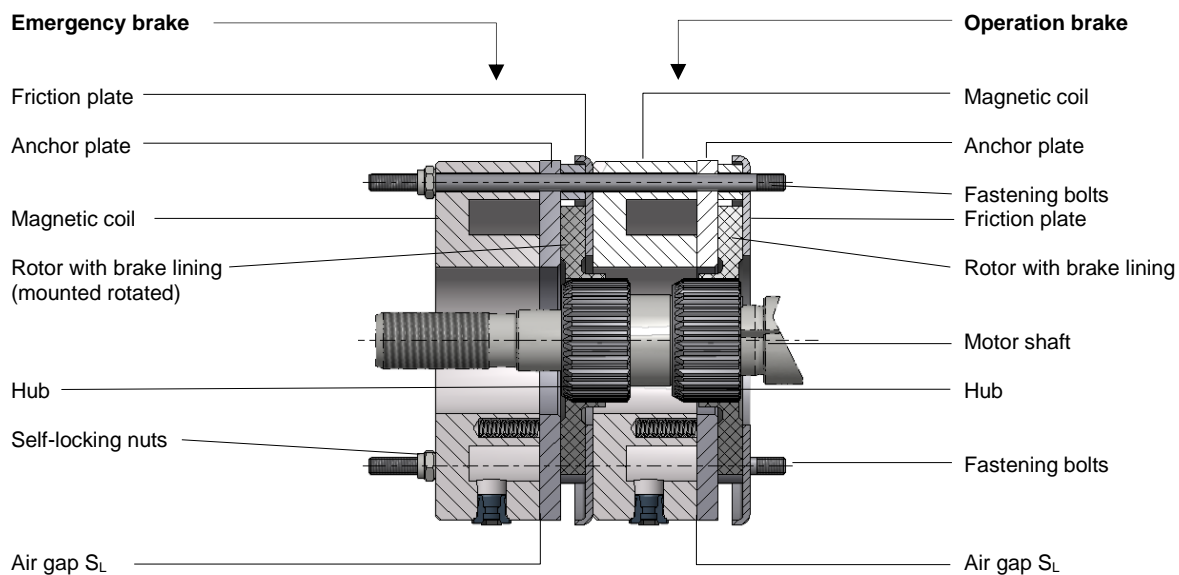


Figure 37: Construction of the brake SK 07../... and SK10../...

7.4.2 Replacement of the brake SK 07../... and SK10../...

Caution! All assembly and disassembly works should be done without load.
The electric chain hoist should be completely disconnected from power (Power off).

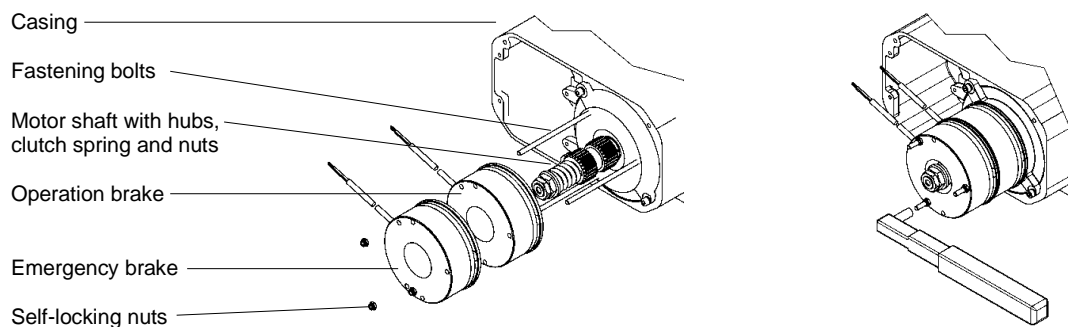


Figure 38: Replacement of the brake SK 07../... and SK10../...

1. Loose screws of cap for brake.
2. Remove cap.
3. Disconnect brake cables.
4. Loosen the self-locking nuts of brake unit.
Caution: The threaded bolts still remain in the motor cover.
5. Pull worn emergency brake and operation brake off the hub.
Caution: Magnetic coil, rotor and friction plate are individual parts.
6. Place the friction plate, rotor and magnetic coil of the new operation brake on the threaded bolts and hub.
7. Place the friction plate, rotor and magnetic body of the new emergency brake on the threaded bolts and hub.
Caution: The rotor must be mounted rotated (see Figure 37).
8. Fasten the double brake with the self-locking nuts.
9. Tighten the nuts evenly (see table for torques).
10. Connect the brake cable according to the wiring diagram.
11. Mount the caps.

Type	Operation brake	Emergency brake	Self-locking nuts	Tightening torque [Nm]	Coil resistance R20 nominal [Ω]	Air gap S_L nominal [mm]	Air gap S_L maximal [mm]
SK07../...	BFK 457-08	BFK 457-08	3xM5	5.5	1681	0.2	0.5
SK10../...	BFK 457-12	BFK 457-12	3xM6	9.5	1051	0.3	0.8

Table 12: Data of the brake SK 07../... and SK10../...

Caution! For order of spare parts, the complete type of the electric chain hoist has to be submitted.



7.5 Electric control of the brake

Mode of functioning

The brake is supplied through a rectifier circuit. It operates according to the closed-circuit current principle. If there is a power failure, the brake acts automatically so that the load is held securely in any position. To reduce the braking distance the brake is switched in a DC circuit.

The different methods of connection in direct control and low voltage control are shown in the respective wiring diagram.

7.6 Troubleshooting on the brake

Faults	Causes	Remedy
Brake does not release; air gap is not zero	Coil has contact to ground or between the windings	Replace the brake
	Wiring wrong or defect	Check and correct wiring
	Rectifier defective or wrong	Compare wiring at rectifier with wiring diagram; especially correct setting of the bridge Measure DC – voltage between terminals 5 and 6 If differences occur change the rectifier
	Air gap too large	Replace the brake

Table 13: Troubleshooting and fault elimination

If rectifier defects occur repeatedly, the brake shall be replaced even if no winding short circuit can be detected. Defect may occur only in warm operating condition.



7.7 Functional check of the brake

When braking the nominal load during lowering movement, the brake distance should not exceed two chain link lengths, but the load should not be stopped jerkily.



Operation and emergency brake (double brake)

The operation brake and the emergency brake are two independently operating brakes. They are arranged one behind the other on the motor pinion shaft. The brake on the motor-side is the operation brake Y1, the brake on the cap-side is the emergency brake Y2. Both brakes are DC spring-operated brakes according to the closed-circuit current principle.

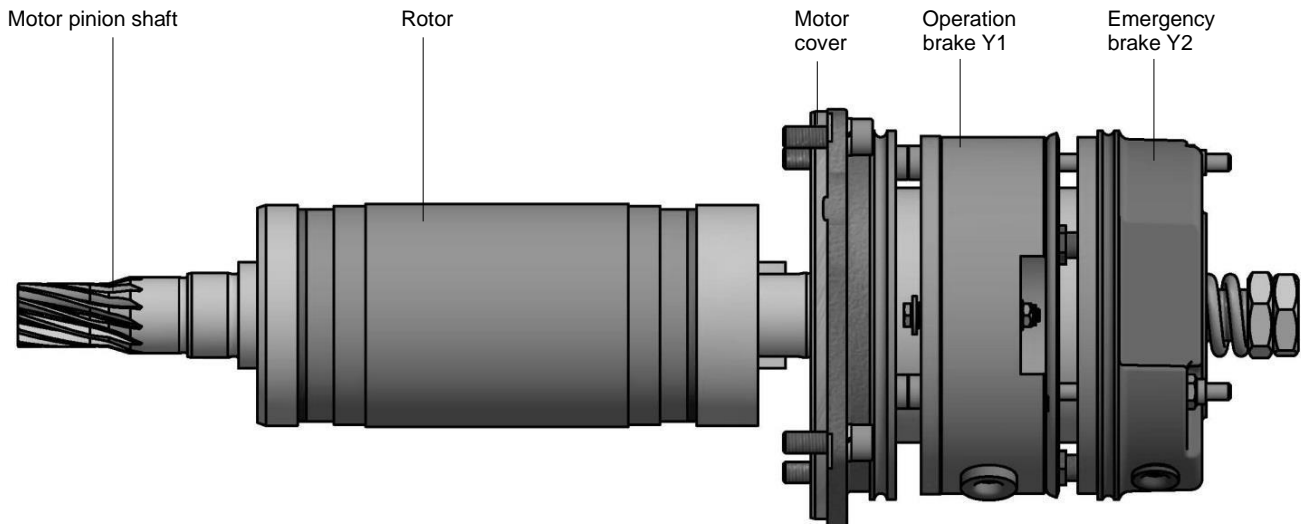


Figure 39: Configuration of the operation and emergency brake

Operation brake Y1

The magnet coil of the operation brake Y1 gets its power supply by the rectifier. The direct current (DC) is operated by the auxiliary contacts of the contactors K2 and K3.

Emergency brake Y2

The magnet coil of the emergency brake Y2 gets its power supply by the rectifier too. The rectifier is supplied by alternating current (AC) out of the motor lines (U and V) 1L1 and 1L2. Due to this AC – supply the incidence time of the emergency brake is longer than of the operation brake.

Separate test of the operation and emergency brake (DGUV V17 (BGV C1) only)

The DC – supply of both magnetic coils are equipped with a plug connector. These connectors are marked with “1” for the operation brake Y1 and “2” for the emergency brake Y2.

To check the brakes separately there is a special plug “P”. This plug is supplying DC power, when the electric chain hoist is ready for operation.

- Check the operation brake Y1:
Open connector “2” and connect this connector with the plug marked with “P”.
The emergency brake will remain open and the proper function of the operation brake can be checked with nominal load. Reconnect connector “2” after this procedure.



- Check the emergency brake Y2:
Carry out the same as above but connect "P" with supply connector "1".
The operation brake will remain open. Now the function of the emergency brake can be checked separately. The test has to be carried out with nominal load. The brake distance of the emergency brake is longer than the brake distance for the operation brake.

Caution! Reconnect the plug connectors 1 – 1 and 2 -2 after each test.



7.8 Safety sliding clutch


The sliding clutch is located between the rotor of the lifting motor and the main pinion shaft and transmits the driving torque. At once it limits the transmissible power depending on the set coupling torque. Hence an overloading of the electric chain hoist and crane components will be prevented.



A special advantage of the patented sliding clutch is that it is situated before the operating brake. In case of heavy wear at the clutch lining an uncontrolled downward movement of the load will be prevented, because the load can be held at every lifting point by the brake.

The clutch unit acts as a dry clutch with asbestos free linings. The clutch is easily adjustable and accessible. The wear resistant special lining material does not require readjustment under normal operational circumstances.

7.8.1 Construction of safety sliding clutch

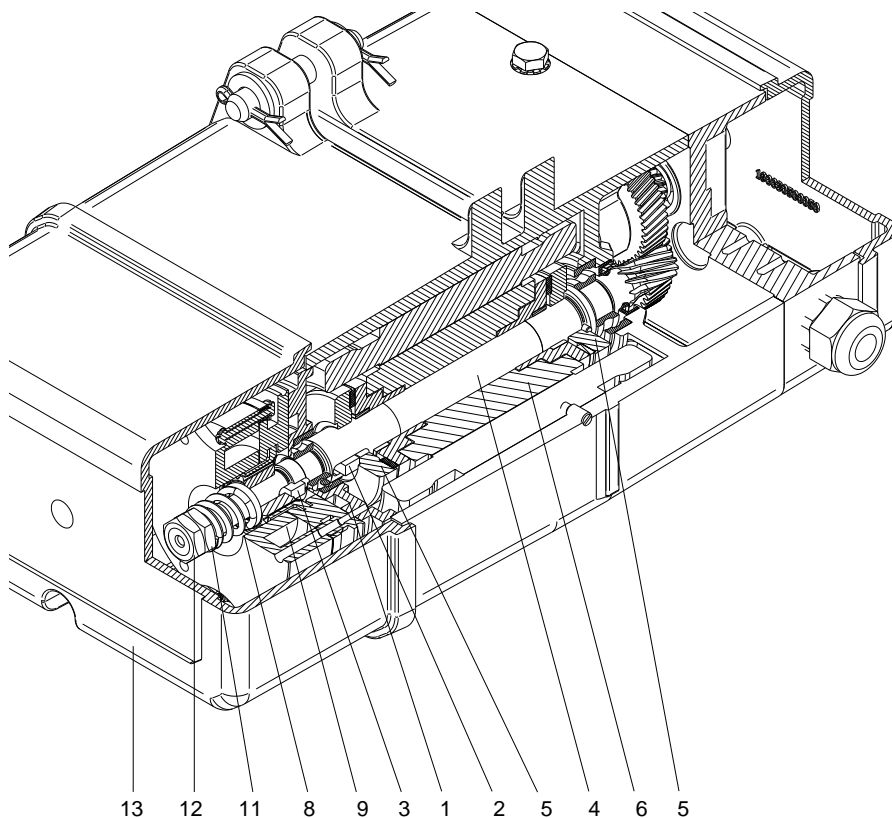

- 1 Motor cover
- 2 Pressure piece 1
- 3 Pressure piece 2
- 4 Motor pinion shaft
- 5 Clutch discs 1 and 2 complete with lining
- 6 Rotor complete
- 7 Brake hub (not shown)
- 8 Clutch spring
- 9 Brake
- 10 Cylindrical pin (not shown)
- 11 Adjusting nut
- 12 Counter nut
- 13 Cap for brake

Figure 40: Construction of the sliding clutch

7.8.2 Adjustment of friction torque at the safety sliding clutch

Caution! The adjustment works should be executed by trained personnel only.



1. Apply the test load =1.1 times the nominal/rated load onto the load hook or the clutch testing device.
2. Switch on the chain hoist by control pendant and check, that the test load can be lifted, or the clutch testing device shows approximately 1.3 times the nominal load. The factor 1.3 is depending on the relevant hoisting speed.
3. Lower the test load to the floor.
4. Decrease or increase clutch torque until the test load is just lifted or the clutch testing device shows the required value.
5. Adjusting the clutch torque as follows:
 - a. Loosen and remove the cap for brake.
 - b. Use two spanners to loosen the counter-tightening (12).
 - c. Tighten (turn adjusting nut clockwise) or loosen (turn adjusting nut counter-clockwise) the pressure spring until the required test load is just lifted or the clutch testing device shows the required value. After adjustment use two spanners to counter-tighten the two hexagon nuts.
6. Finally: Recheck the clutch torque by lifting the test load.
Record the adjusting value in the inspection book of the electric chain hoist.

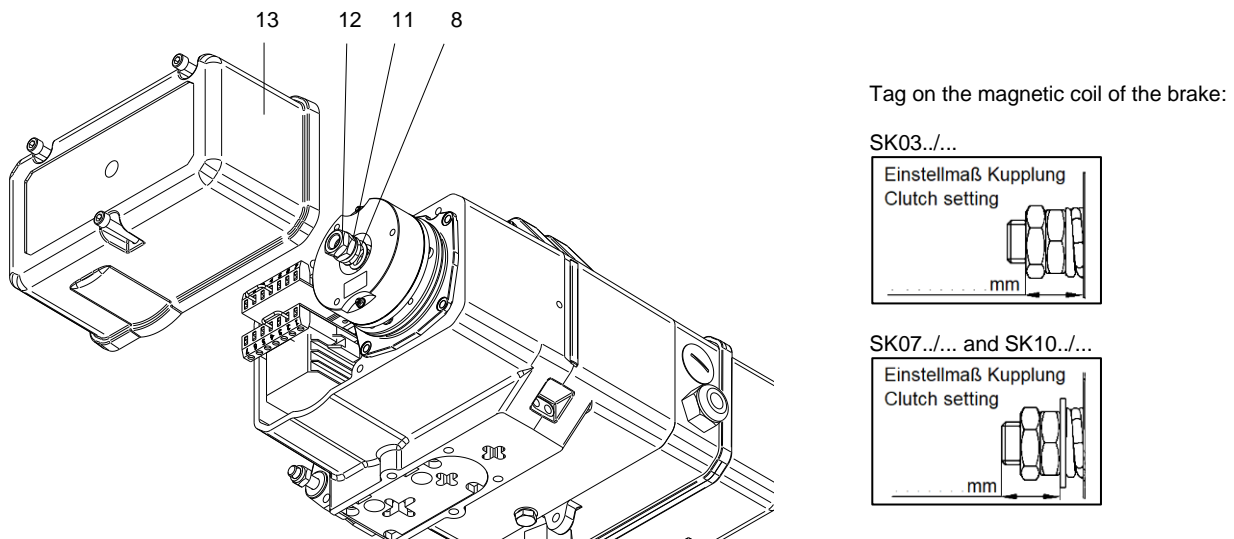


Figure 41: Adjustment of friction torque of the sliding clutch

The sliding clutch is set with the test load by the manufacturer. After changing or replacing the brake-clutch-group, it is not necessary to reset the clutch. A test with nominal load is required only.

The original distance between the counter nut and the magnetic coil of the brake is marked on the tag of the brake.

7.8.3 Checking the release limit of the sliding clutch during regular inspections

The release limit of the sliding clutch has to be checked by a specialist during the yearly work safety inspection in accordance with DGUV V52 (BGV D6) §26 or DGUV V54 (BGV D8) §23. It should be checked whether the hoist lifts the nominal load! The hoist must not lift more, than 1.6 x nominal load.

If test loads larger than nominal load are not available, then release limit of slipping clutch can be checked by a clutch testing device. In this case, slipping limit should be approximately 1.3 x nominal load. After checking the release limit, verify again if the hoist lifts the nominal load.

When measuring wrong release value, the sliding clutch has to be readjusted in accordance with chapter 7.8.2, and verification to chapter 7.8.3 has to be repeated. Adjustment value is to be recorded.

7.9 Assembly and disassembly of the brake-clutch assembly group

The brake-clutch assembly group is a separate fully closed assembly group.


Caution! All assembly and disassembly works have to be done without load.
The electric chain hoist has to be switched off and disconnected from the grid.

Before disassembly the electric chain hoist must be suspended in normal use (upright use) or supported horizontally.

Risk of oil loss.



Disassembly of the brake-clutch assembly group

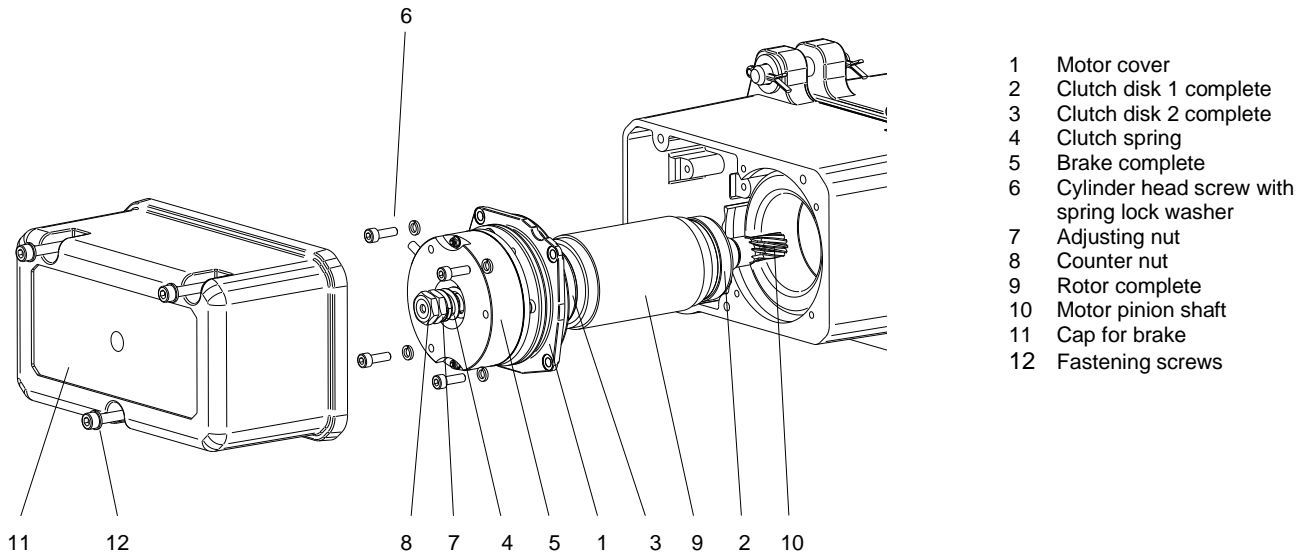

- 1 Motor cover
- 2 Clutch disk 1 complete
- 3 Clutch disk 2 complete
- 4 Clutch spring
- 5 Brake complete
- 6 Cylinder head screw with spring lock washer
- 7 Adjusting nut
- 8 Counter nut
- 9 Rotor complete
- 10 Motor pinion shaft
- 11 Cap for brake
- 12 Fastening screws

Figure 42: Brake-clutch assembly group

1. Loose fastening screws (12) on cap of brake (11).
2. Remove the cap of brake (11).
3. Disconnect brake cable of brake and pull back it.
4. Loose cylindrical head screws (6) on motor cover (1).
5. Pull out the motor cover (1) with brake-clutch assembly group.



Caution! The assembly has to be done in reversed order.



7.10 Load chain

Hoist chains are means of load carrying which require official approval. It is, therefore, important to observe the guidelines issued by the Institution for Statutory Insurance and Prevention with regard to round steel chains in hoisting operation, the guidelines for general inspection and test specifications in accordance with DIN 685-5:1981, DIN EN 818-7:2002+A1:2008 and the accident prevention regulations in DGV V54 (BGV D8) and in DGUV V52 (BGV D6) or equivalent regulations in the respective country.

7.10.1 Lubrication of the load chain before initial operation and during operation

The links along the entire length of the load chain must be lubricated with penetrating gear lubricant oil before starting operation for the first time and during operation. The chain has to be lubricated with no load in order to get the lubricant in the contact areas between the chain links. Subsequent lubrication, whereby the links must be cleaned first, depends on the frequency of use and the operating conditions.



A dry-film lubricant, e.g. lubricating varnish, graphite powder, should be used when ambient influences are conducive to wear (sand, emery).

7.10.2 Testing of wear and replacement of the load chain


The continuous monitoring of the load chain is compulsory according to DIN 685-5:1981 and the accident prevention regulations in DGUV V54 (BGV D8), §27. The load chain must be tested before starting operation and after approx. 200 operating hours or 10,000 load cycles under normal conditions or more often under harsh and severe conditions.

Testing must cover checking links, particularly at their points of contact, for wear, cracks, deformation and other damages.



The chain must be replaced:

- if the nominal thickness at the points of contact is reduced by 10%,
- if the chain or a link is elongated by 5 %, or an eleven links piece of chain is elongated by 2%
- if the links are rigid

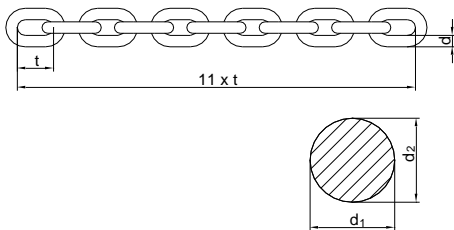

t = nominal length of one chain link
 d = nominal diameter of chain link
 d_1, d_2 = actual diameters

$$d_m = \frac{d_1 + d_2}{2}$$

Figure 43: Load chain dimensions

Chain dimensions	mmxmm	5x15	5.2x15	P 5.4x15	7x22	7.2x21	P 7.4x21.1	10x28	10.5x28.2
Nominal diameter of link	d in mm	5	5.2	5.4	7	7.2	7.4	10	10.5
Wear limit of diameter	d_m in mm	4.5	4.7	4.9	6.3	6.5	6.7	9	9.45
Length over 1 link	t in mm	15	15	15	22	21	21.1	28	28.2
Wear limit of length of one link (max)	t_{max} in mm	15.8	15.8	15.8	23.1	22.1	22.2	29.4	29.6
Length over 11 links	$11 \times t$ in mm	165	165	165	242	231	232.1	308	310.2
Wear limit of length of 11 links (max)	$(11 \times t)_{max}$ in mm	168.3	168.3	168.3	246.8	235.6	236.7	314.2	316.4

Table 14: Measurement of wear

Caution! Replacement of chain shall only be done if spare parts are obtained from the manufacturer or his approved service agent.
 The chain guide and hold-down must also be replaced with the chain if necessary.
 To replace the load chain, see chapter 3.1.6 and following.



7.11 Measuring wear and replacing load hook

According to DIN 15401-1:1979 load hooks have to be replaced if the length between the chisel punch marks (dimension Y) widened more than 10 % or the load bearing section is reduced by 5 %. The permissible values are shown on the hook certificate in the Inspection book.

7.12 Maintenance work on the trolleys

The checks and maintenance work on the electric trolleys and push trolleys have to be done in accordance with Table 9.

The brake operates absolutely maintenance free.




8 Duty rate of an electric chain hoist

Caution! The duty rate and the number of operating cycles in one hour must not be higher than as shown on the specification plate of the hoist or in a technical data table. (European regulation FEM 9.683).



The duty rate, expressed as the cyclic duration factor (c.d.f.) is the ratio of **running time to running time + period of rest**

Formula:
$$\text{c.d.f. \%} = \frac{\text{running time} \times 100\%}{\text{running time} + \text{period of rest}}$$

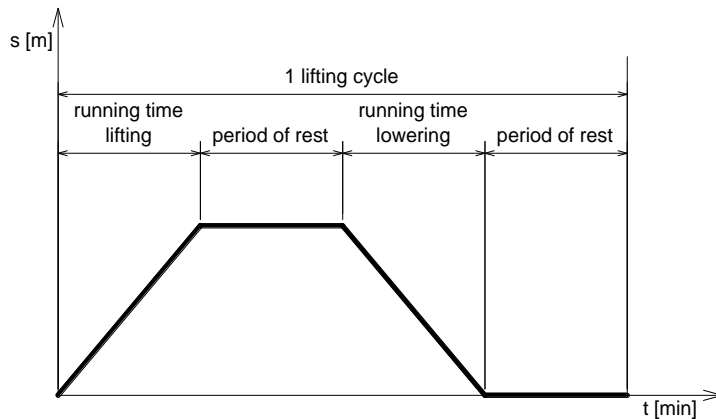

The duty rate is limited by the permissible degree of heat in the lifting motor.

The running time is dependent on the necessary lifting height, lifting speed of the electric chain hoist and the number of lifting motions required for a particular transport procedure (unloading trucks, feeding machines).

It is difficult in practice to take note of the duty rate during the lifting operation. We, therefore, give the following practical guidelines:

8.1 Short time duty

This duty type is not permissible for the slower speed of hoisting motors with two speeds. After having reached the maximum running time a break is required, and the hoist can be further used in intermittent duty mode.

The permissible operating periods without cooling interval when operation starts and with a motor temperature of approx. 20° C are following:

Duty group acc. to FEM 9.511	Duty group acc. to ISO 4301	Duty rate c.d.f.	Operating period * acc. to FEM 9.683 (t_B in min)
1 Bm	M 3	25 %	15
1 Am	M 4	30 %	15
2 m	M 5	40 %	30
3 m	M 6	50 %	30

* The operating periods t_B of the STAGEKET chain hoists are higher than required acc. to FEM 9.683.

Table 15: Duty rate for short time duty

8.2 Intermittent duty

Operation must be interrupted whenever the highest permissible operating time is reached. The following breaks are necessary depending on the duty rate c.d.f. of the electric chain hoist:

Duty rate c.d.f.	Break (min)
15 %	5 times running time
20 %	4 times running time
25 %	3 times running time
30 %	2.5 times running time
40 %	1.5 times running time
50 %	1 times running time
60 %	0.66 times running time

Table 16: Duty rate for intermittent duty

8.3 Example

The electric chain hoist SK 030/22 type 500/1-8 is to lift loads of 500 kg to a height of 3 m.

Performance data: load capacity 500 kg
 lifting speed 8 m/min – high speed
 duty rate 40 % – high speed

At the beginning of the lifting operation the electric chain hoist has a temperature of approx. 20 °C.

$$\text{c.d.f.} = \frac{3 \text{ m (lifting)} + 3 \text{ m (lowering)}}{8 \text{ m/min}} = 0.75 \text{ min}$$

The hoist can be operated for approximately 30 min. without a break. This means

$$40 \text{ cycles} \times 500\text{kg load} = \underline{20000 \text{ kg}} \text{ transported load.}$$

After 30 minutes of operating time, 1.5 minutes break for each minute of operating time must be taken (i.e. 3 times the operating time). This break is usually necessary for slinging and taking off loads.

Caution! Cooling periods are imperative for extreme lifting heights (from 10 metres on).

Low lifting speed should only be used for precise lowering and lifting of loads. It is not suitable when greater lifting heights shall be driven through.



Option: To protect the lifting motor a thermal overload device is offered as an option (24 Volts low voltage control is required!).

9 Duty rate of the electric trolleys

If the hoist is equipped with an electric trolley the operators have to take care of the duty rating of the trolley as well. This especially applies to very long track systems.

Electric trolley type	Duty rate ED	Running time (t _B in min)
Trolleys with a single speed	40 %	30
Trolleys with a double speeds	40/20 %	30*

* The ratings are relevant for the fast travelling speed.

Table 17: Duty rate for electric trolleys

10 Strainer clamp for the control cable

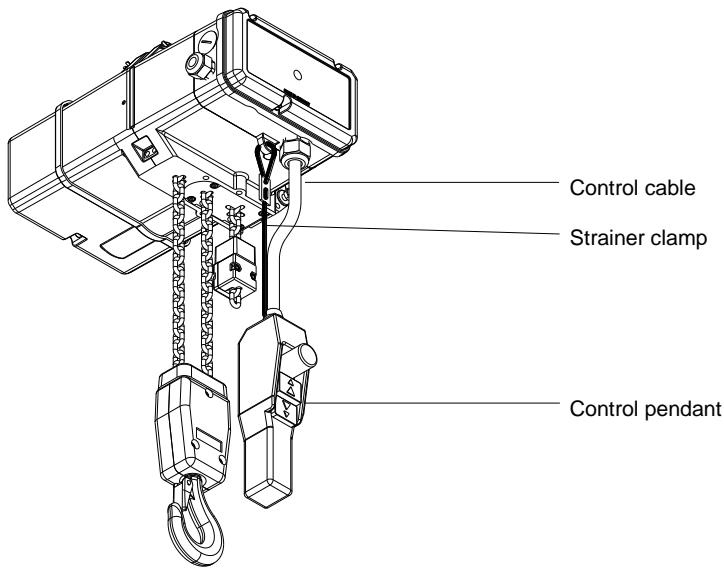


Figure 44: Assembly of the strainer clamp

Caution! The strainer clamp must be fixed in such a way as to prevent any tensile forces affecting the control cable. Pulling the chain hoist at the control pendant by means of the strainer clamp is not permitted.



11 Lubricants / Auxiliary materials

11.1 Gear

The gear is already filled with gear oil by the manufacturer. It is lifetime lubrication.

The oil must be changed:

- during general overhaul of the electric chain hoist
- in case of visible leakages
- in case of excessive breathing out of the gear vent
- after each opening of the gear box

Caution! Make sure that the gear box is filled with the right amount of gear oil.



Change of oil:

For that purpose, an oil filling screw is located on the upper side and an oil draining screw is located on the bottom side of the hoist body.

Gear oil specification: mineral oil; viscosity 220 mm²/s at 40°C.

The amount of oil is shown in the following table:

Version	Amount [ml]
SK030/...; SK031/...	175
SK070/...; SK071/...	350
SK100/...; SK101/...	525

Table 18: Amount of oil

The following oil sorts can be used:

Supplier	Oil sort	Remarks
Tectrol ©	Tectrol Gear CLP 220	
Tectrol ©	Tectrol Food CLP 220	Food industry
Fuchs Europe ©	Renolin CLP 220	
Mobil ©	Mobil SHC 630	
Shell ©	Omala 220 S2 G220	
Total ©	Carter EP 220	
Castrol ©	Alpha SP 220	

Table 19: Oil sorts

Caution! The waste oil has to be disposed in accordance with the law of environmental protection.



11.2 Chain

Caution! **Before first operation** and during the operation of the electric chain hoist the chain links must be lubricated over the whole length of the chain by a creeping gear oil.



Lubrication of chain:

- Lubricate chain without load.
- Lubricate the shaded areas of the chain link.
- Also lubricate the chain in the chain box.
- Clean the chain before repeated lubrication.
- The amount of lubricant and the frequency of lubrication may vary due to operating conditions.
- Lubricate chain minimum each 3 month.
- Shorten lubrication intervals if necessary /in dependence of operating conditions.
- Use a dry-film lubricant, if the operating conditions are conducive to wear (sand, emery).

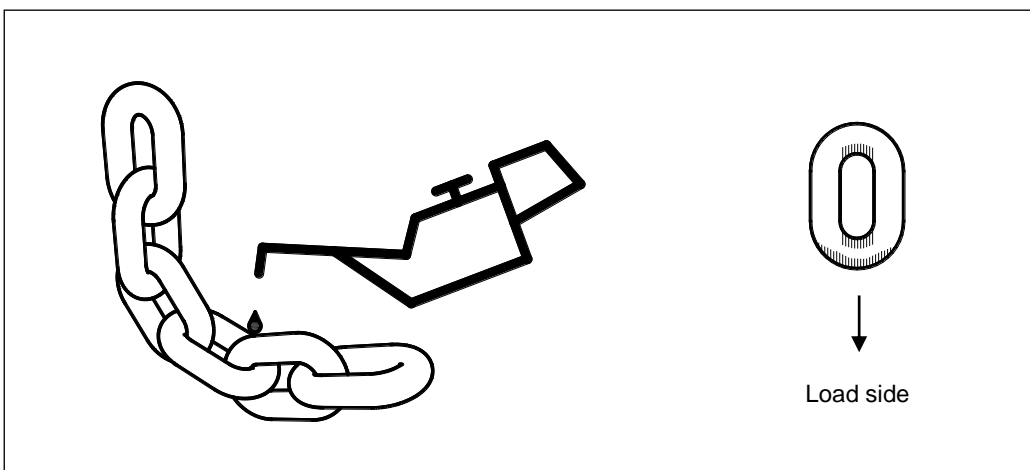


Figure 45: Lubrication of the chain

Following lubricants are recommended for lubrication of chain depending on operating conditions:

Supplier	Lubricant	Remarks
Tectrol ©	Kettenöl K50	
Tectrol ©	Tectrol Multi Spray XL	Dry-film lubricant
Tectrol ©	Food Kettenspray	Food industry
Klüber ©	Klüberoil CA 1-460	
Klüber ©	Klüberoil 4UH 1-1500	Food industry
Castrol ©	Optimol Viscogen KL300	
Fuchs Lubritech ©	Ceplattyn 300	Dry-film lubricant
Fuchs Lubritech ©	Stabylan 2001	
Fuchs Lubritech ©	Stabylan 5006	
Fuchs Lubritech ©	Decordyn 350	
Fuchs Europe ©	Renolit SO-GFB	Grease
Klüber ©	Microlube GB 00	Grease

Table 20: Lubricants of chain

11.3 Hook block and hook tackle

Caution! The roller bearings of the hook and chain sprocket must be lubricated after approx. 20,000 lifting cycles or one year under normal operating conditions, and at shorter intervals under heavy operating conditions.



Lubricants recommended for lubrication of bearings:

Supplier	Lubricant
Tectrol ©	Tectrol Spezial-Fett LX 2
Fuchs Europe ©	Renolit Duraplex EP3
Fuchs Lubritech ©	Lagermeister LX EP2

Table 21: Lubricants of bearings

11.4 Trolley

Caution! The gear pinion and the geared wheels of the electric trolley have to be lubricated with roller bearing grease **before first operation** and once a year or after 10.000 driving cycles, if in heavy use the interval has to be shortened.



Lubricants recommended for lubrication of gearings:

Supplier	Lubricant
Tectrol ©	Tectrol Spezial-Fett LX 2
Fuchs Europe ©	Renolit Duraplex EP3
Fuchs Lubritech ©	Lagermeister LX EP2


Table 22: Lubricants of gearing

12 Measures to be taken at the end of the S.W.P.

After the hoist or its components have reached the end of the S.W.P. the hoist or its components have to be overhauled or to be taken finally out of operation.

The parts have to be disposed in accordance to the laws of environment protection. Metals, rubber, plastics have to be disposed or recycled separately.

13 Example of Declaration of Conformity

<p>LIFTKET</p>	<p align="center">Declaration of Conformity (Machine Directive 2006/42/EC supplement II 1 A)</p>		<p>Dok.-nr. / Sprache HFTXXXXXX / DE Page 1/1</p>
<p>Herewith the manufacturer: LIFTKET Hoffmann GmbH Dresdener Straße 64-68 04808 Wurzen Germany</p> <p>declares that the electric chain hoist</p> <p>Type: _____ Serial number: _____</p> <p>meets the appropriate requirements of the Machine Directive 2006/42/EC.</p> <p>The protection targets of the Low Voltage Directive 2014/35/EU were observed in accordance with supplement I, no. 1.5.1 of the Machine Directive 2006/42/EC.</p> <p>The conformity with the rules of the following further EC-Directives will be declared: 2014/30/EC Directive relating to electromagnetic compatibility</p> <p>The following harmonised regulations are applied: EN ISO 12100: 2010 Safety of machinery EN 60204-32: 2008 Electrical equipment of machines; Requirements for hoisting machines EN 818-7: 2002 + A1: 2008 Short link chain for lifting purposes; Fine tolerance hoist chain, Grade T EN 14492-2: 2006 + A1: 2009 Power operated winches and hoists</p> <p>The following national regulations and technical specifications are applied: FEM 9.511: 1986 Rules for the design of series lifting equipment; Classification of mechanisms FEM 9.751: 1998 Series lifting equipment; Power driven series hoist mechanisms; Safety</p> <p>The relevant technical documents according to the Machine Directive 2006/42/EC supplement VII 1 A are issued and will be provided on reasonable request to national authorities. Authorised person of technical documents: Matthias Müller, LIFTKET Hoffmann GmbH, Dresdener Straße 64-68, 04808 Wurzen</p> <p>The type was certified by: TÜV Rheinland Industrie Service GmbH Test certificate number: Prüflaboratorium für Maschinen Burger Chaussee 9 03044 Cottbus Germany</p> <p>Wurzen, 01.08.2017</p> <p>Matthias Müller Technical Manager</p>			

14 Example of Declaration of Incorporation

LIFTKET	Declaration of Incorporation for partly completed machinery (Machine Directive 2006/42/EC supplement II 1 B)	Dok.-nr. / Sprache HFTXXXXXX / DE Seite 1/1																																																								
<p>Herewith the manufacturer: LIFTKET Hoffmann GmbH Dresdener Straße 64-68 04808 Wurzen Germany</p> <p>of the partly completed machinery (electric chain hoist)</p> <p>Type: _____ Serial number: _____</p> <p>declares that the use is not allowed until it has been certified that - as appropriate - the machinery which the electric chain hoist has been installed into meets the regulations of the Machine Directive 2006/42/EC.</p> <p>The following essential health and safety requirements relating to the supplement I of the Machine Directive 2006/42/EC are applied and observed:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 5%; vertical-align: top;">1.1</td> <td>General</td> </tr> <tr> <td></td> <td>1.1.1; 1.1.2; 1.1.3; 1.1.5; 1.1.6</td> </tr> <tr> <td style="vertical-align: top;">1.2</td> <td>Control systems</td> </tr> <tr> <td></td> <td>1.2.1; 1.2.2; 1.2.3; 1.2.4; 1.2.4.1; 1.2.4.2; 1.2.4.3; 1.2.6</td> </tr> <tr> <td style="vertical-align: top;">1.3</td> <td>Protection against mechanical hazards</td> </tr> <tr> <td></td> <td>1.3.2; 1.3.3; 1.3.4; 1.3.7; 1.3.9</td> </tr> <tr> <td style="vertical-align: top;">1.5</td> <td>Risks due to other hazards</td> </tr> <tr> <td></td> <td>1.5.1; 1.5.4; 1.5.6; 1.5.8; 1.5.11</td> </tr> <tr> <td style="vertical-align: top;">1.6</td> <td>Maintenance</td> </tr> <tr> <td></td> <td>1.6.1; 1.6.3; 1.6.4</td> </tr> <tr> <td style="vertical-align: top;">1.7</td> <td>Information</td> </tr> <tr> <td></td> <td>1.7.1; 1.7.2; 1.7.3; 1.7.4; 1.7.4.1; 1.7.4.2; 1.7.4.3</td> </tr> <tr> <td style="vertical-align: top;">4.1</td> <td>General</td> </tr> <tr> <td></td> <td>4.1.1; 4.1.2; 4.1.2.3; 4.1.2.4; 4.1.2.6; 4.1.3</td> </tr> <tr> <td style="vertical-align: top;">4.2</td> <td>Requirements for machinery whose power source is other than manual effort</td> </tr> <tr> <td></td> <td>4.2.1; 4.2.2</td> </tr> <tr> <td style="vertical-align: top;">4.3</td> <td>Informationen and markings</td> </tr> <tr> <td></td> <td>4.3.3</td> </tr> <tr> <td style="vertical-align: top;">4.4</td> <td>Instructions</td> </tr> <tr> <td></td> <td>4.4.2</td> </tr> </table> <p>All relevant essential health and safety requirements relating to the Machine Directive 2006/42/EC are applied and observed up to the interfaces described in the order confirmation, in the operating instructions and in the wiring diagram.</p> <p>The conformity with the rules of the following further EC-Directives will be declared:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">2014/30/EU</td> <td>Directive relating to electromagnetic compatibility</td> </tr> </table> <p>The following harmonised regulations are applied:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">EN ISO 12100: 2010</td> <td>Safety of machinery</td> </tr> <tr> <td>EN 60204-32: 2008</td> <td>Electrical equipment of machines; Requirements for hoisting machines</td> </tr> <tr> <td>EN 818-7: 2002 + A1: 2008</td> <td>Short link chain for lifting purposes; Fine tolerance hoist chain, Grade T</td> </tr> <tr> <td>EN 14492-2: 2006 + A1: 2009</td> <td>Power operated winches and hoists</td> </tr> </table> <p>The following national regulations and technical specifications are applied:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">FEM 9.511: 1986</td> <td>Rules for the design of series lifting equipment; Classification of mechanisms</td> </tr> <tr> <td>FEM 9.751: 1998</td> <td>Series lifting equipment; Power driven series hoist mechanisms; Safety</td> </tr> </table> <p>The relevant technical documents according to the Machine Directive 2006/42/EC supplement VII 1 B are issued and will be provided on reasonable request to national authorities. Authorised person of technical documents: Matthias Müller, LIFTKET Hoffmann GmbH, Dresdener Straße 64-68, 04808 Wurzen</p> <p>The type was certified by:</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 30%;">TÜV Rheinland Industrie Service GmbH Prüflaboratorium für Maschinen Burger Chaussee 9 03044 Cottbus Germany</td> <td>Test certificate number:</td> </tr> </table> <p style="margin-top: 20px;">Wurzen, 01.08.2017</p> <p style="margin-top: 20px;">Matthias Müller Technical Manager</p>			1.1	General		1.1.1; 1.1.2; 1.1.3; 1.1.5; 1.1.6	1.2	Control systems		1.2.1; 1.2.2; 1.2.3; 1.2.4; 1.2.4.1; 1.2.4.2; 1.2.4.3; 1.2.6	1.3	Protection against mechanical hazards		1.3.2; 1.3.3; 1.3.4; 1.3.7; 1.3.9	1.5	Risks due to other hazards		1.5.1; 1.5.4; 1.5.6; 1.5.8; 1.5.11	1.6	Maintenance		1.6.1; 1.6.3; 1.6.4	1.7	Information		1.7.1; 1.7.2; 1.7.3; 1.7.4; 1.7.4.1; 1.7.4.2; 1.7.4.3	4.1	General		4.1.1; 4.1.2; 4.1.2.3; 4.1.2.4; 4.1.2.6; 4.1.3	4.2	Requirements for machinery whose power source is other than manual effort		4.2.1; 4.2.2	4.3	Informationen and markings		4.3.3	4.4	Instructions		4.4.2	2014/30/EU	Directive relating to electromagnetic compatibility	EN ISO 12100: 2010	Safety of machinery	EN 60204-32: 2008	Electrical equipment of machines; Requirements for hoisting machines	EN 818-7: 2002 + A1: 2008	Short link chain for lifting purposes; Fine tolerance hoist chain, Grade T	EN 14492-2: 2006 + A1: 2009	Power operated winches and hoists	FEM 9.511: 1986	Rules for the design of series lifting equipment; Classification of mechanisms	FEM 9.751: 1998	Series lifting equipment; Power driven series hoist mechanisms; Safety	TÜV Rheinland Industrie Service GmbH Prüflaboratorium für Maschinen Burger Chaussee 9 03044 Cottbus Germany	Test certificate number:
1.1	General																																																									
	1.1.1; 1.1.2; 1.1.3; 1.1.5; 1.1.6																																																									
1.2	Control systems																																																									
	1.2.1; 1.2.2; 1.2.3; 1.2.4; 1.2.4.1; 1.2.4.2; 1.2.4.3; 1.2.6																																																									
1.3	Protection against mechanical hazards																																																									
	1.3.2; 1.3.3; 1.3.4; 1.3.7; 1.3.9																																																									
1.5	Risks due to other hazards																																																									
	1.5.1; 1.5.4; 1.5.6; 1.5.8; 1.5.11																																																									
1.6	Maintenance																																																									
	1.6.1; 1.6.3; 1.6.4																																																									
1.7	Information																																																									
	1.7.1; 1.7.2; 1.7.3; 1.7.4; 1.7.4.1; 1.7.4.2; 1.7.4.3																																																									
4.1	General																																																									
	4.1.1; 4.1.2; 4.1.2.3; 4.1.2.4; 4.1.2.6; 4.1.3																																																									
4.2	Requirements for machinery whose power source is other than manual effort																																																									
	4.2.1; 4.2.2																																																									
4.3	Informationen and markings																																																									
	4.3.3																																																									
4.4	Instructions																																																									
	4.4.2																																																									
2014/30/EU	Directive relating to electromagnetic compatibility																																																									
EN ISO 12100: 2010	Safety of machinery																																																									
EN 60204-32: 2008	Electrical equipment of machines; Requirements for hoisting machines																																																									
EN 818-7: 2002 + A1: 2008	Short link chain for lifting purposes; Fine tolerance hoist chain, Grade T																																																									
EN 14492-2: 2006 + A1: 2009	Power operated winches and hoists																																																									
FEM 9.511: 1986	Rules for the design of series lifting equipment; Classification of mechanisms																																																									
FEM 9.751: 1998	Series lifting equipment; Power driven series hoist mechanisms; Safety																																																									
TÜV Rheinland Industrie Service GmbH Prüflaboratorium für Maschinen Burger Chaussee 9 03044 Cottbus Germany	Test certificate number:																																																									

The operators who have been instructed to use this hoist and have read the manual and especially the safety advice.

Name. Surname	Date	Signature

The advice contained in this manual is limited to such matters / facts which are necessary to ensure a safe operation and maintenance of the industrial hoists. to be observed by appropriate skilled and qualified operators. Further information about other operational conditions is not considered herewith.
In case of any deviations to the normal operations (such as unusual noise, vibrations, higher input current or frequently blowing fuses) the hoist has to be taken out of operation. The area underneath the load has to be secured and blocked off; a possible fault could result in danger to people or goods. The operator or owner of the hoist has to call a trained specialist to repair the hoist.